




Power Door Locks

Component Location Index


CAUTION:

- Alt SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

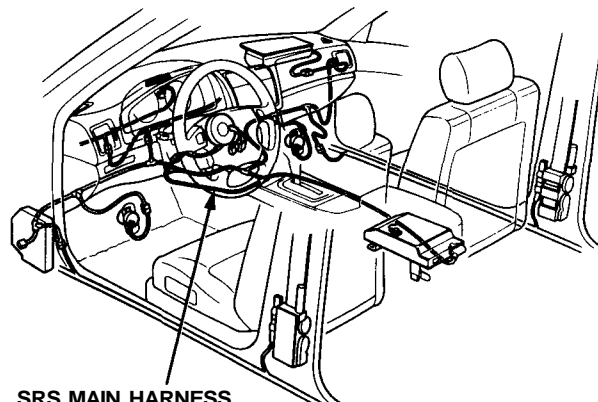

SRS MAIN HARNESS
(Covered with yellow outer insulation)

DOOR LOCK CONTROL UNIT Input test, page 23-278 ('93-'95) or 23-272 ('91-'92 Models)

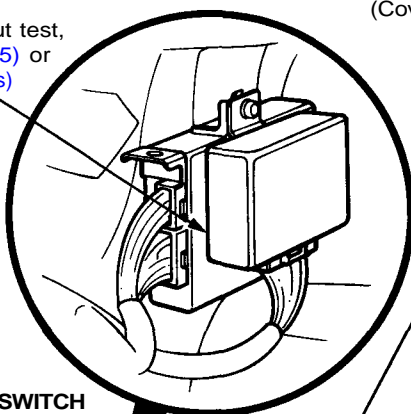

IGNITION KEY SWITCH
Test, page 23-209

DRIVER'S DOOR LOCK SWITCH
Test, page 23-284

RIGHT FRONT DOOR LOCK SWITCH
Test, page 23-284

RIGHT FRONT DOOR LOCK ACTUATOR ASSEMBLY and LOCK KNOB SWITCH
Test, page 23-282 ('92-'95) or 23-277 ('91 Model)
Replacement, section 20

RIGHT FRONT KEY CYLINDER SWITCH
Test, page 23-284
RIGHT FRONT DOOR SWITCH
Test, page 23-208

RIGHT REAR DOOR LOCK ACTUATOR ASSEMBLY and LOCK KNOB SWITCH
Test, page 23-283
Replacement, section 20
RIGHT REAR DOOR SWITCH
Test, page 23-208

DRIVER'S DOOR LOCK ACTUATOR ASSEMBLY and LOCK KNOB SWITCH
Test, page 23-276 ('91 Model) or 23-281 ('92-'95 Models)
Replacement, section 20

DRIVER'S DOOR KEY CYLINDER SWITCH
Test, page 23-14 ('95 Model) or 23-284 ('91-'94 Models)
DRIVER'S DOOR SWITCH
Test, page 23-208

LEFT REAR DOOR LOCK ACTUATOR ASSEMBLY and LOCK KNOB SWITCH
Test, page 23-278 ('91 Model) or 23-283 ('92-'95 Models)
Replacement, section 20
LEFT REAR DOOR SWITCH
Test, page 23-208