




## Rear Door Lock Actuator Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 6-P connector from the actuator.
3. Check actuator operation by connecting power and ground, according to the table.

Terminal Position	4	5
LOCK	⊖	⊕
UNLOCK	⊕	⊖

**CAUTION:** To prevent damage to the motor, apply battery voltage only momentarily.

**NOTE:** Right rear door is shown, left rear door is similar.

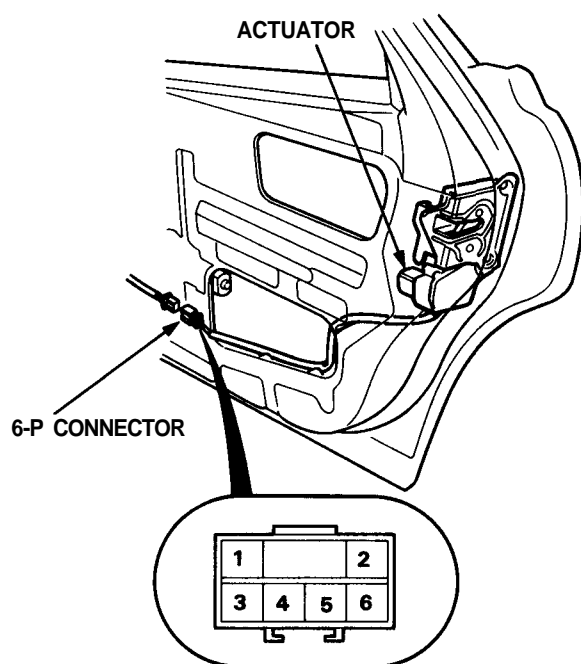

View from wire side

4. If the actuator fails to operate properly, replace it.

5. Check for continuity between the terminals in each switch position, according to the table.

Terminal Position	2	6
LOCK		
UNLOCK	○—○	○—○

