



# Power Door Locks

## Door Lock Switch Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 3-P connector from the switch.
3. Check for continuity between the terminals in each switch position, according to the table.

Terminal	1	2	3
Position			
UNLOCK		○	○
OFF			
LOCK	○	○	

NOTE: Right front door is shown, driver's door is similar.

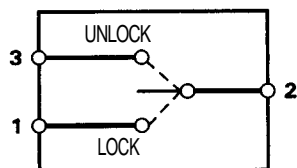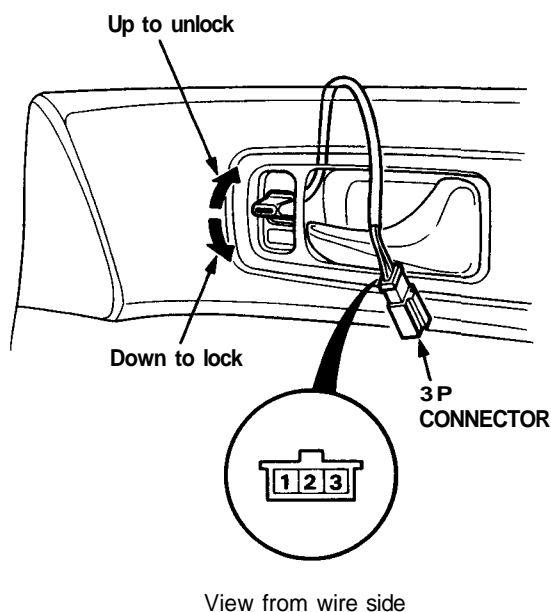

## Door Key Cylinder Switch Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 3-P connector from the actuator.
3. Check for continuity between the terminals in each switch position, according to the table.

Terminal	1	2	3
Position			
LOCK		○	○
UNLOCK	○	○	

NOTE: Right front door is shown, driver's door is similar.

