

Seat Heaters

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 10 (15 A) fuse (In the under-dash fuse/relay box)	Blown No. 19 (7.5 A) fuse (In the under-dash fuse/relay box)	Blown indicator light bulb	Seat heater switch	Seat heater	Thermistor (In the seat cushion heater)	Seat heater relay input	Seat heater control unit	Poor ground	Open circuit, loose or disconnected terminals
Symptom											
Seat heaters work, but indicator light does not go on.				1						G304	
Seat heaters do not work and indicator light does not go on.		1			3			2		G301 G302 G303 G304	WHT/BLK or BLK/YEL
Seat heaters do not work, but indicator light goes on.	Driver's seat								1	G304	GRN, BRN or ORN
	Front passenger's seat								1	G304	BLK/YEL, BRN or ORN/BLU
Seat cushion heater or seat back heater does not work, but indicator light goes on.						1					
Seat heater cannot be adjusted.	Driver's seat				1		2		3		RED/YEL, RED/GRN, BLU or PNK
	Front passenger's seat				1		2		3		BLU/YEL, BLU/GRN, BLU or PNK