

Wipers/Washers

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 26 (30 A) fuse (in the under-dash fuse/relay box)	Blown No. 23 (7.5 A) fuse (in the under-dash fuse/relay box)	Wiper switch	Mist switch	Wiper motor assembly	Washer switch	Washer motor	Intermittent wiper relay	Wiper low relay	Wiper high relay	Intermittent wiper circuit (in the integrated control unit)	Combined operation with wiper/ washer (in the integrated control unit)	Insufficient washer fluid in reservoir	Disconnected or blocked washer hose, or clogged outlet	Disconnected wiper linkages	Intermittent dwell time controller	Poor ground	Open circuit, loose or disconnected terminals
Symptom																			
Wipers do not work.	In all positions	1		4		2										3		G151	GRN/BLK
	In INT		1	4		5			2	3		6						G151 G152 G301 G302 G303	YEL/GRN ² GRN BLU/WHT ²
	In LO		1	4		5			2	3		6						G152 G301 G302 G303	YEL/GRN ¹ BLU/RED
	In HI		1	3		4					2							G152 G301 G302 G303	BLU/GRN YEL/GRN ¹
	In MIST		1		3				2									G152 G301 G302 G303	YEL/GRN ¹ BLU/GRN
Blades do not return to park position with wiper switch turned OFF.				2		1													BLU/WHT ²
Erratic intermittent cycle or wipers do not work inter- mittently.				1								3					2		BLU/RED, GRN/YEL or GRN/WHT
Little or no washer fluid is pumped.			1				4	5						2	3			G152	BLK/YEL
Wipers and washer do not work at the same time.													1						BLU/RED