


# Wipers/Washers

## Washer Motor Test

1. Remove the left front inner fender (see [section 20](#)).
2. Disconnect the 2-P connector from the washer motor.
3. Test the washer motor by connecting battery power to the  $\oplus$  terminal and ground to the  $\ominus$  terminal.
  - If the motor does not run or fails to run smoothly, replace it.
  - If the motor runs smoothly but little or no washer fluid is pumped, check for a disconnected or blocked washer hose, or a clogged pump outlet in the motor.

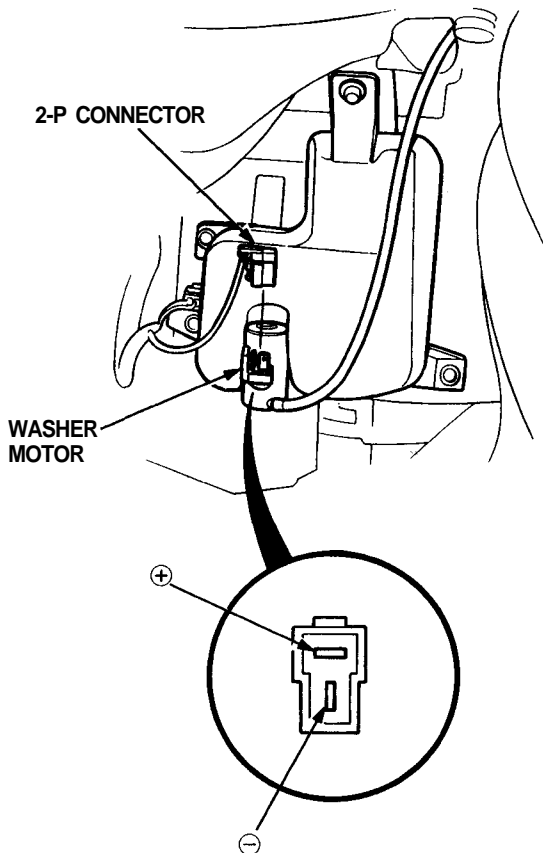

## Washer Level Switch Test (Canada)

1. Remove the left front inner fender (see [section 20](#)).
2. Disconnect the 2-P connector from the washer reservoir, then pull the switch out of it.
3. Check that the float moves up and down freely. If the float does not move freely, replace the switch.
4. Check for continuity between the A and B terminals with the float up and down. There should be continuity with the float down and no continuity with the float up. If necessary, replace the switch.

