




## Windshield Wiper Motor Replacement


1. Open the hood, and remove the cap nuts and wiper arms.

NOTE: Carefully remove the wiper arms so that they do not touch the hood.


2. Remove the windshield lower molding, hood seal, and air scoop by prying their trim clips out and removing the screws.

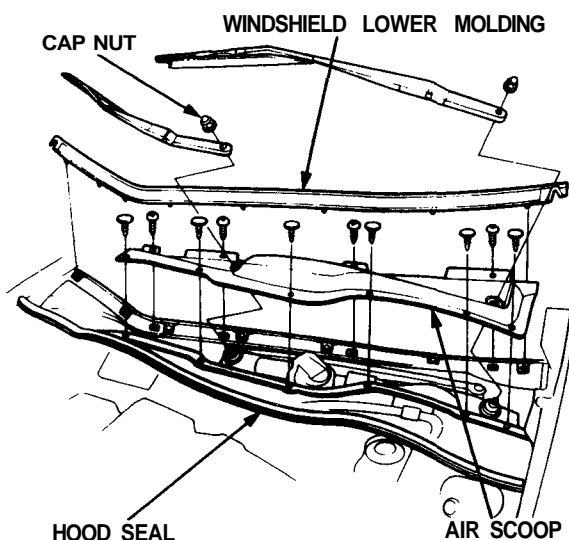

3. Disconnect the 5-P connector from the wiper motor assembly, then detach the wiper harness from the wiper linkage assembly.
4. Remove the wiper linkage assembly by removing the three mounting bolts.

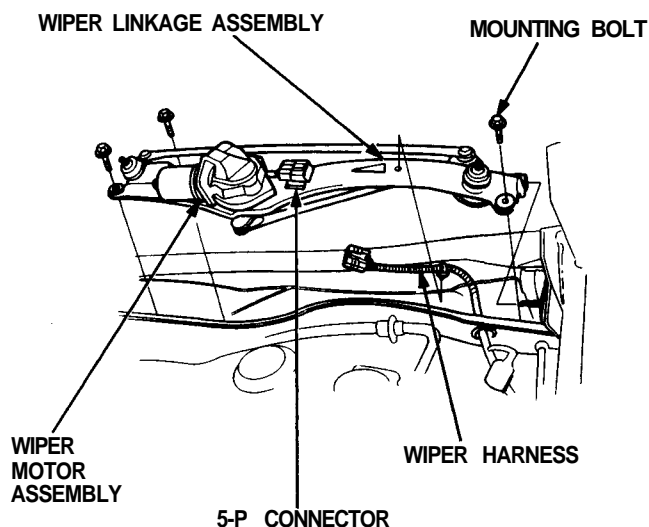

5. Remove the three mounting bolts and one nut from the wiper linkage assembly, and remove the wiper motor assembly.

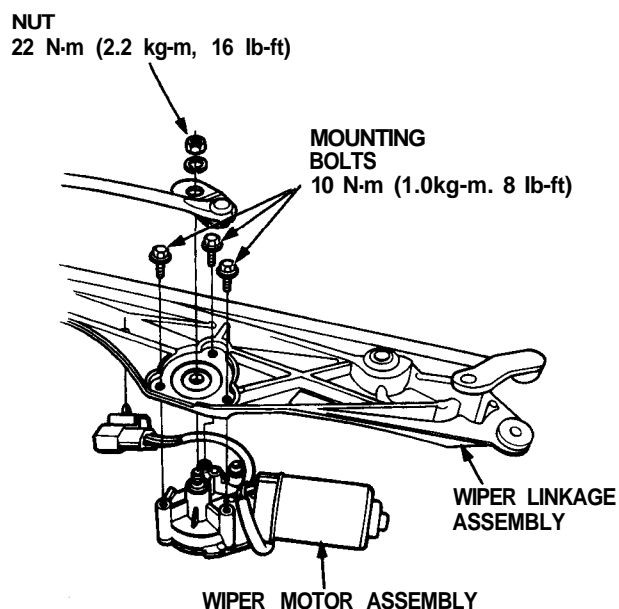

6. Install in the reverse order of removal.