

# Wipers/Washers

## Washer Replacement

1. Remove the washer filler assembly.
2. Remove the left front inner fender (see [section 20](#)).
3. Disconnect the hose and 2-P connector from the washer motor, and disconnect the 2-P connector from the washer level sensor (Canada).
4. Remove the washer reservoir by removing the three mounting bolts.
5. Remove the washer motor and washer level switch from the washer reservoir.
6. Remove the washer nozzles and hose.

### NOTE:

- Clamp the hose at the engine compartment wire harness.
- Take care not to pinch the hose during reinstallation.
- Install the clips firmly.
- After installing, adjust the aim of the washer nozzles.

