


# Cruise Control

## Brake Switch Test

1. Disconnect the 4-P connector from the switch.

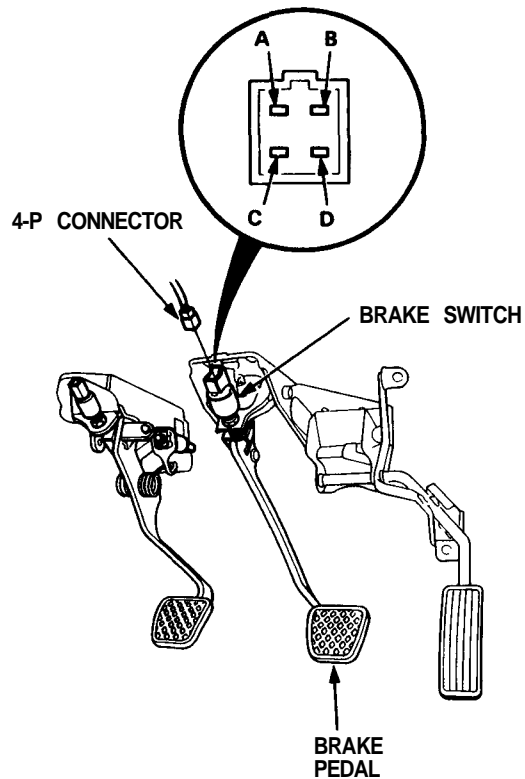


2. Check for continuity between the terminals, according to the table.

Terminal	A	B	C	D
Brake pedal				
RELEASED	○			○
PUSHED		○	○	

3. If necessary, replace the switch or adjust pedal height (see [section 12](#)).

## Clutch Switch Test

1. Disconnect the 2-P connector from the switch.

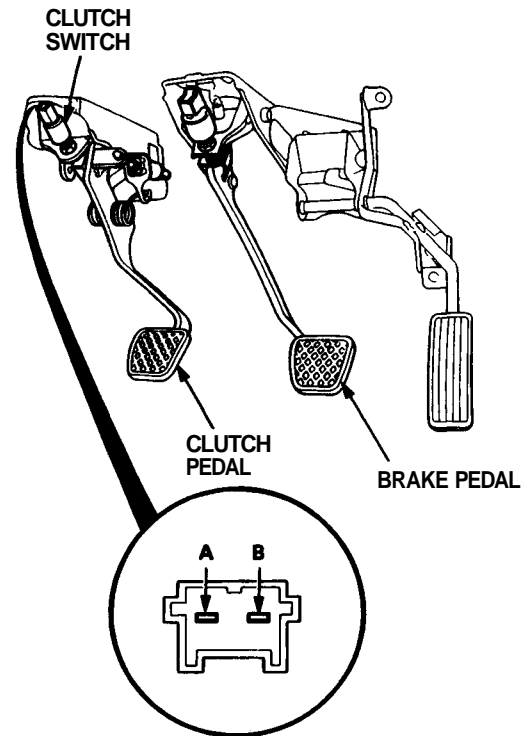

2. Check for continuity between the terminals, according to the table.

Terminal	A	B
Clutch pedal		
RELEASED	○	○
PUSHED		

3. If necessary, replace the switch or adjust pedal height (see [section 12](#)).