


Cruise Control

Actuator Cable Adjustment

1. Check that the actuator cable moves smoothly without binding or sticking.
2. Start the engine, and warm it up to normal operating temperature (radiator fan comes on twice).
3. Measure the amount of movement of the output linkage until the engine speed starts to increase. At first, the output linkage should be located at the fully closed position. Free play should be 5 ± 1.5 mm (0.20 ± 0.06 in.).

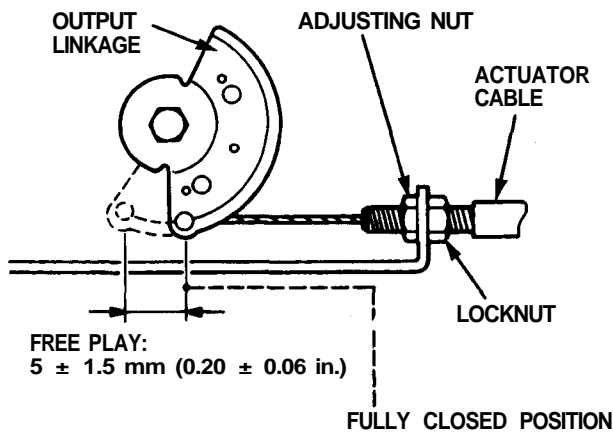

4. If the free play is not within specs, loosen the locknut, and turn the adjusting nut as required.

NOTE: If necessary, check the throttle control system ([section 11](#)), then recheck the output linkage free play.

5. Retighten the locknut and recheck the free play.