

Security Alarm System

Description

This system is activated automatically 15 seconds after everything has been closed and locked. The security alarm system indicator light located on the driver's side door panel will flash after the doors are properly locked.

If any of the following conditions occur, the horns will sound, the headlights will flash, and the side marker lights, parking lights, and taillights will flash for about two minutes, or until the system is disarmed by unlocking either door from the outside with the key.

- | | |
|---|---|
| ① Door is opened forcibly | ④ Battery terminal(s) are removed and reconnected |
| ② Trunk lid is opened without using the key | ⑤ Engine starter circuit and battery circuit are bypassed by breaking the ignition switch |
| ③ Hood is opened | ⑥ Hood/trunk lid opener in the vehicle is operated |

Flowchart of the security alarm system operation:



