




Trunk Latch Switch Test


1. Open the trunk lid, then remove the trunk lid inner trim (see [section 20](#)).
2. Disconnect the 6-P connector from the trunk latch.

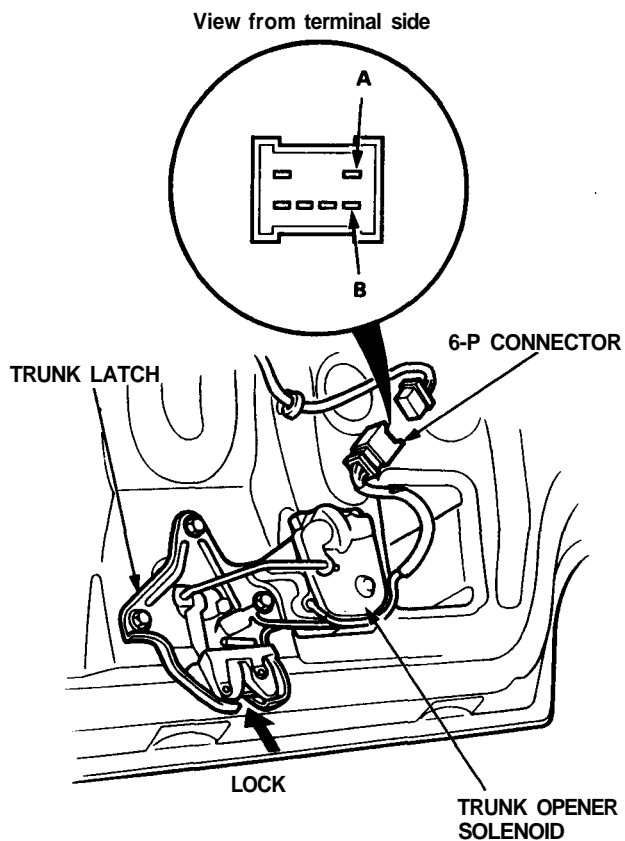

3. Check continuity between the A and B terminals.
 - There should be continuity with the trunk lid opened.
 - There should be no continuity with the trunk latch in LOCK (trunk lid closed) position.

Trunk Key Cylinder Switch Test

1. Open the trunk lid, then remove the trunk lid inner trim (see [section 20](#)).
2. Disconnect the 2-P connector from the trunk key cylinder switch.

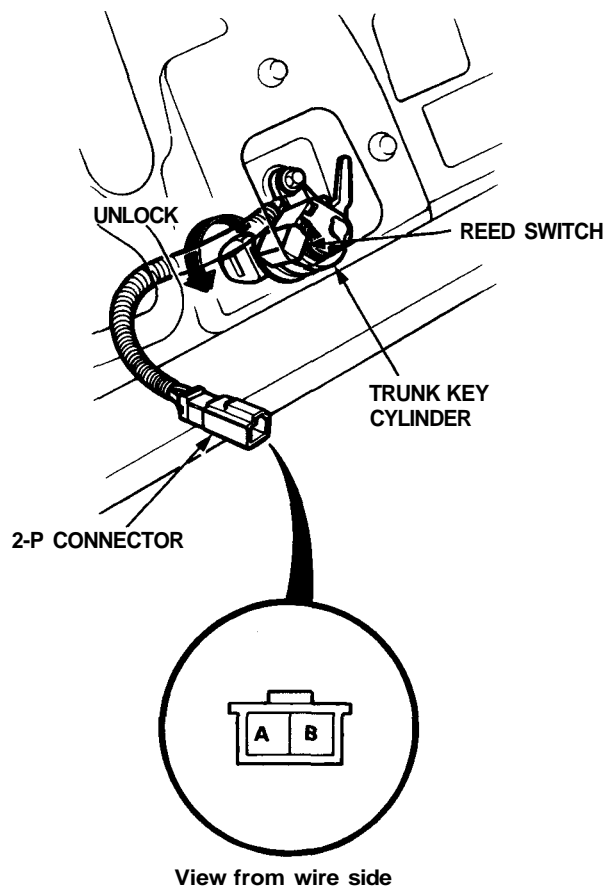

3. Check continuity between the A and B terminals.
 - There should be continuity when the trunk key cylinder is turned to UNLOCK with the key.
 - There should be no continuity when the keylock is released.