

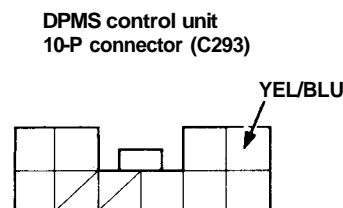
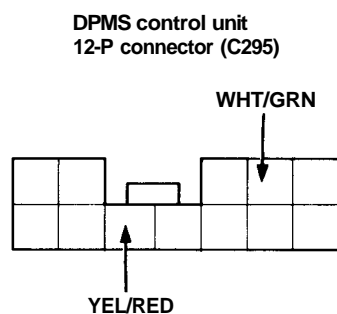


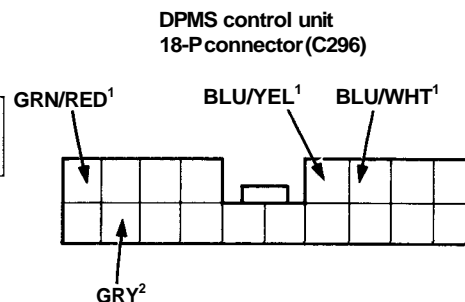

Flowchart No. 4

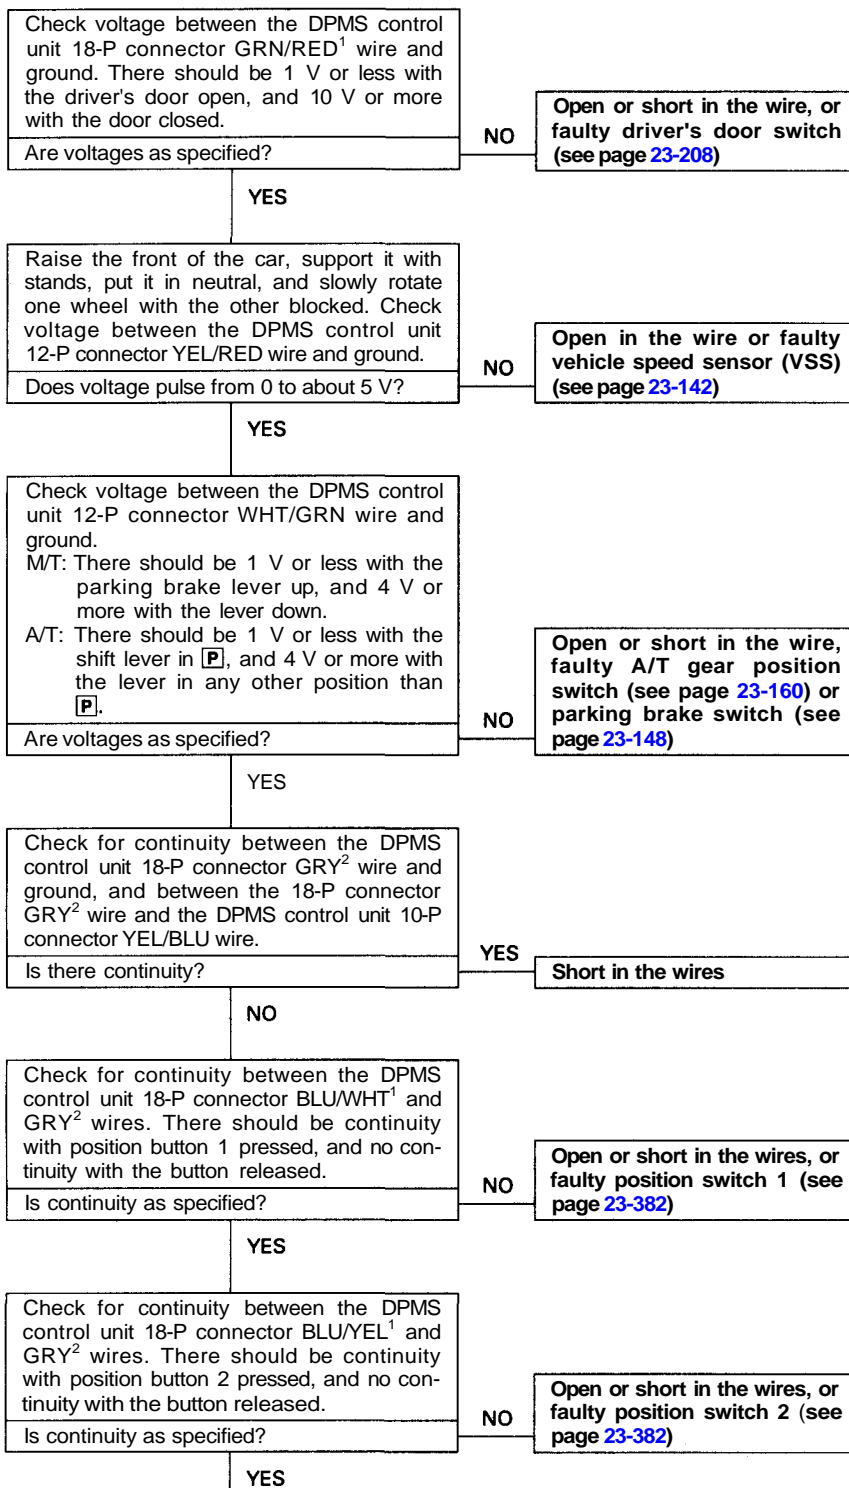


(To page 23-352)

(cont'd)


Troubleshooting

Flowcharts (cont'd)


(From page 23-351)

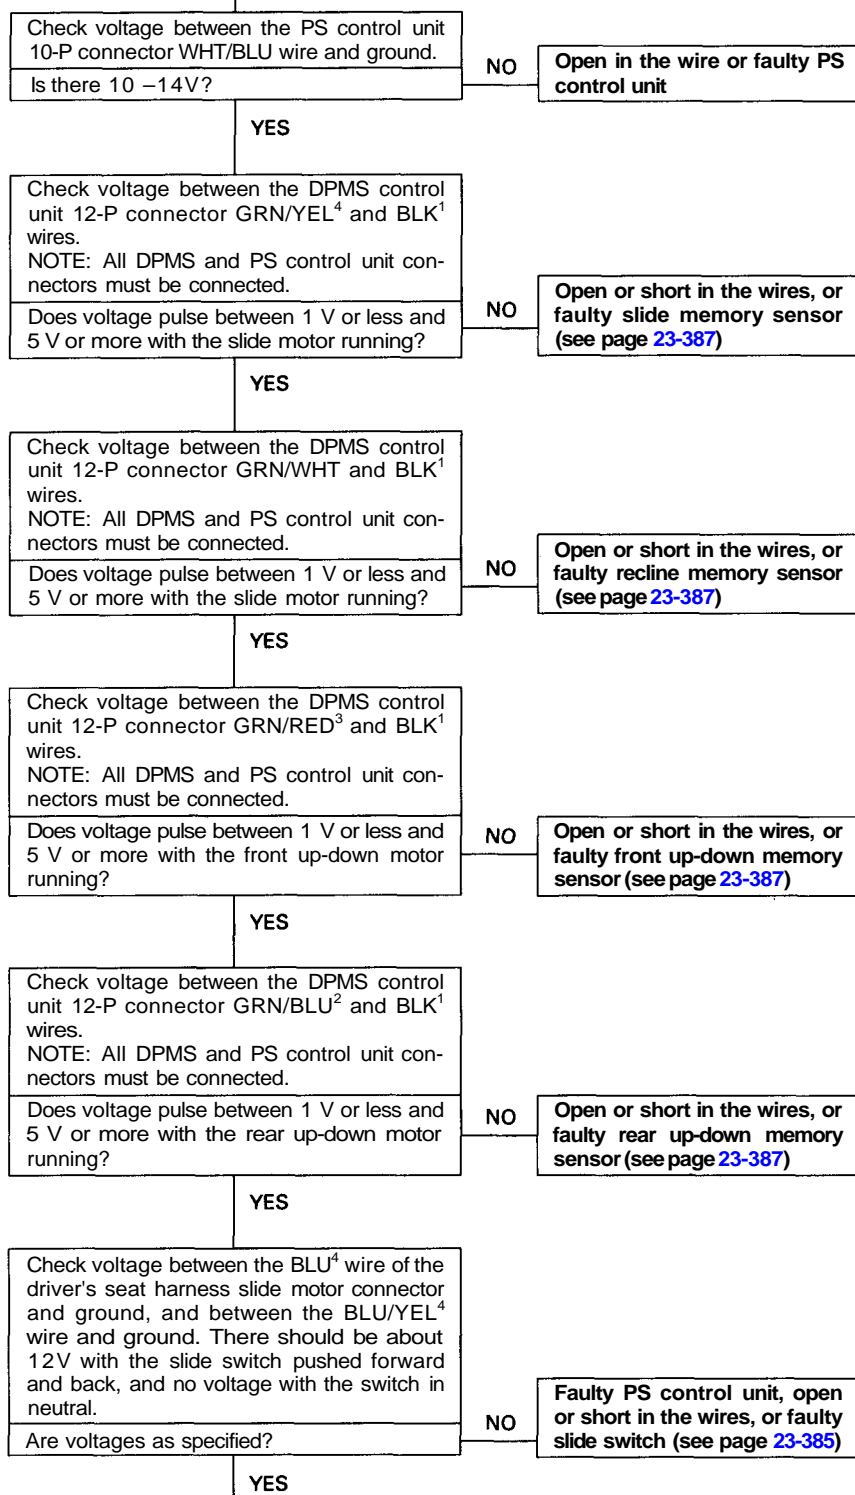


Power seat control unit
10-P connector (C705)

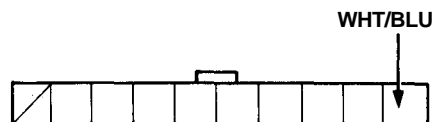

DPMS control unit
12-P connector (C295)

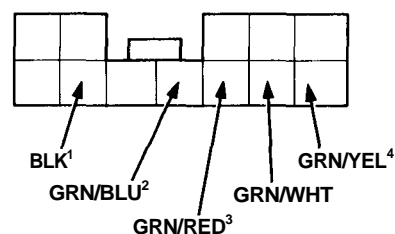


Driver's seat harness
slide motor 2-P connector (C709)

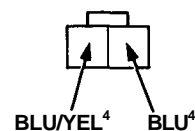


(To page 23-353)




(From page 23-352)

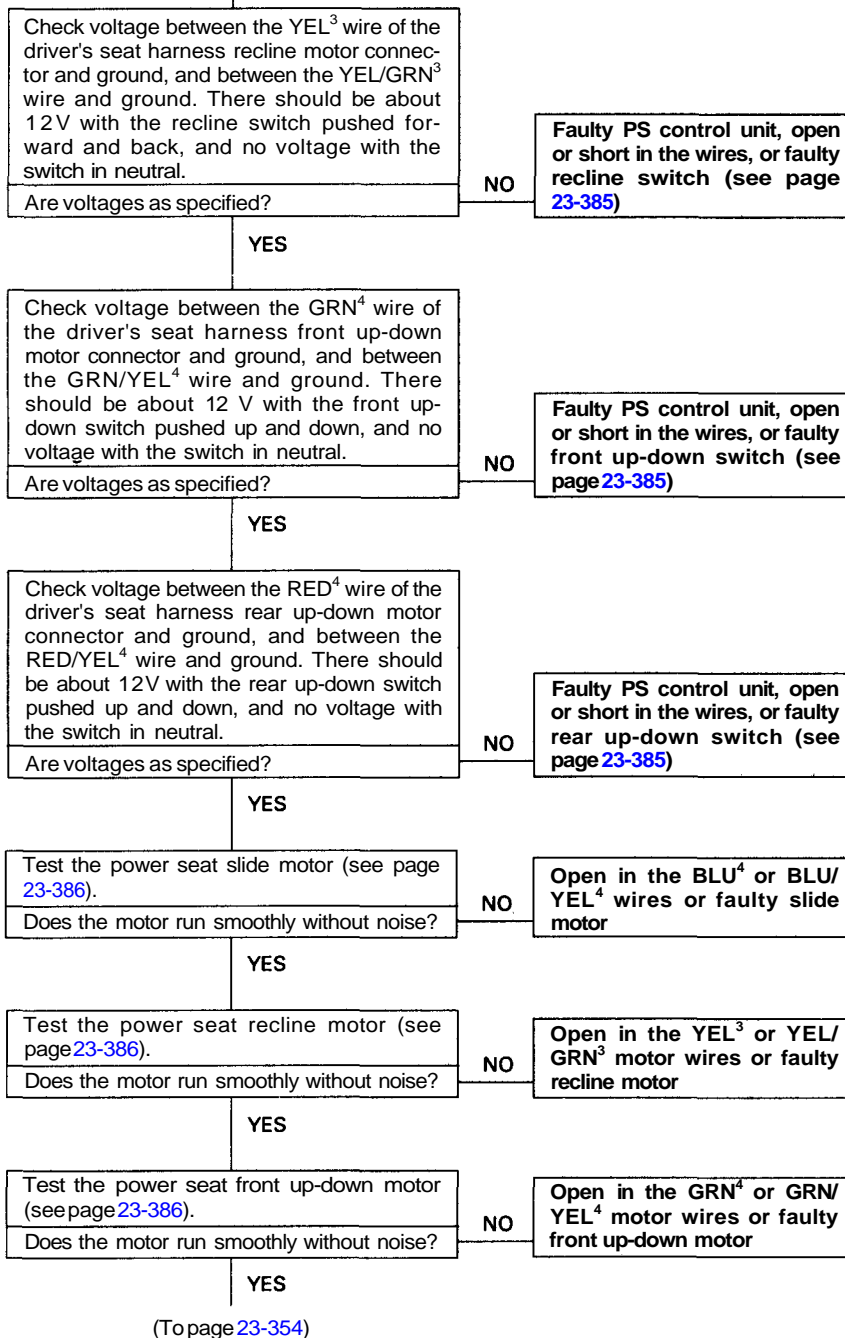

 
Driver's seat harness recline motor 4-P connector (C715)



 Driver's seat harness front up-down motor 2-P connector (C711)



 Driver's seat harness rear up-down motor 2-P connector (C710)




(cont'd)

Troubleshooting

Flowcharts (cont'd)

(From page 23-353)

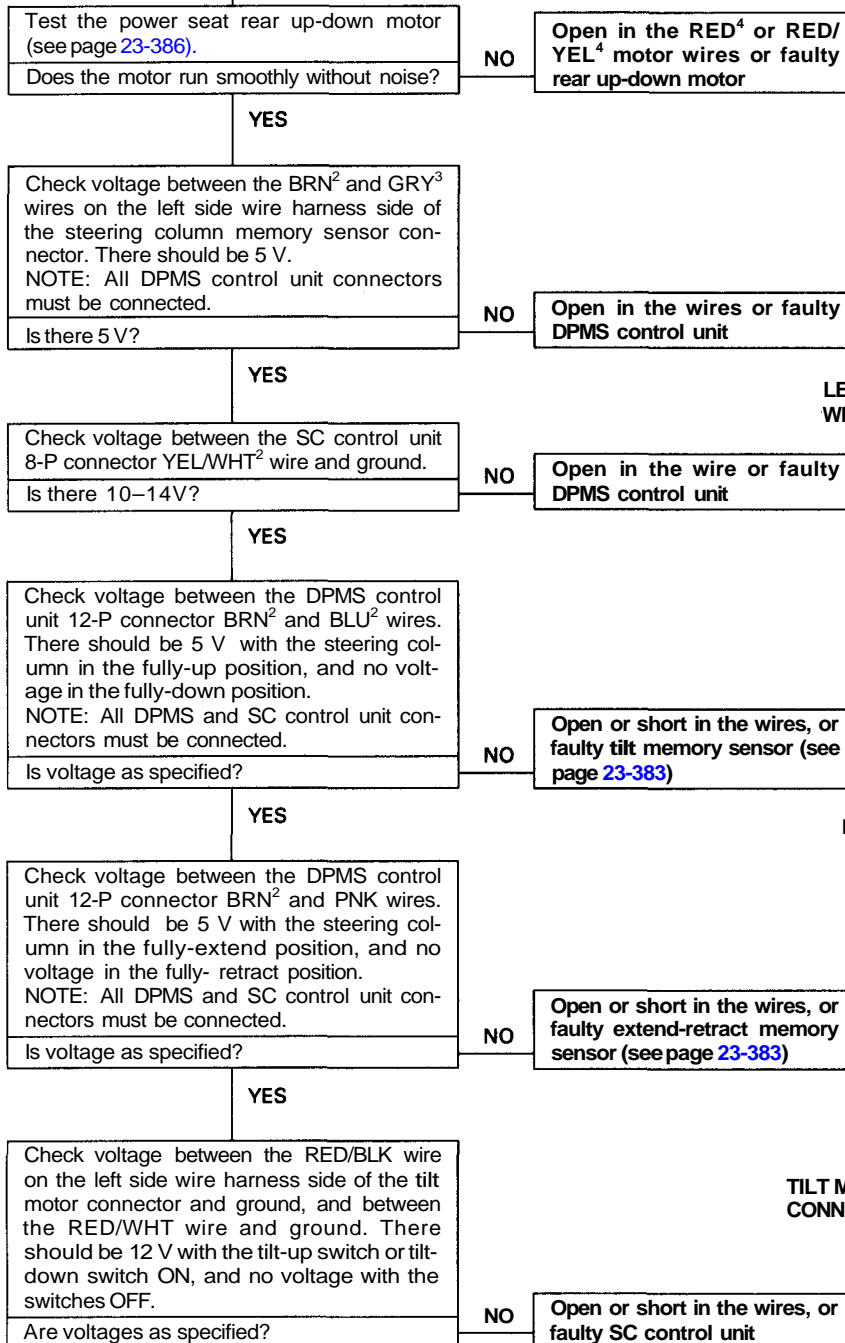


(To page 23-355)

STEERING COLUMN MEMORY SENSOR CONNECTOR


LEFT SIDE WIRE HARNESS



 Steering column control unit 8-P connector (C289)





DPMS control unit 12-P connector (C295)

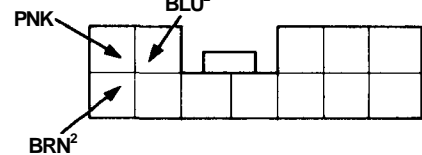

EXTEND-RETRACT MOTOR CONNECTOR


TILT MOTOR CONNECTOR

LEFT SIDE WIRE HARNESS


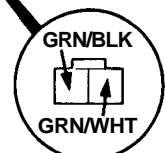
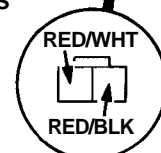




(From page 23-354)

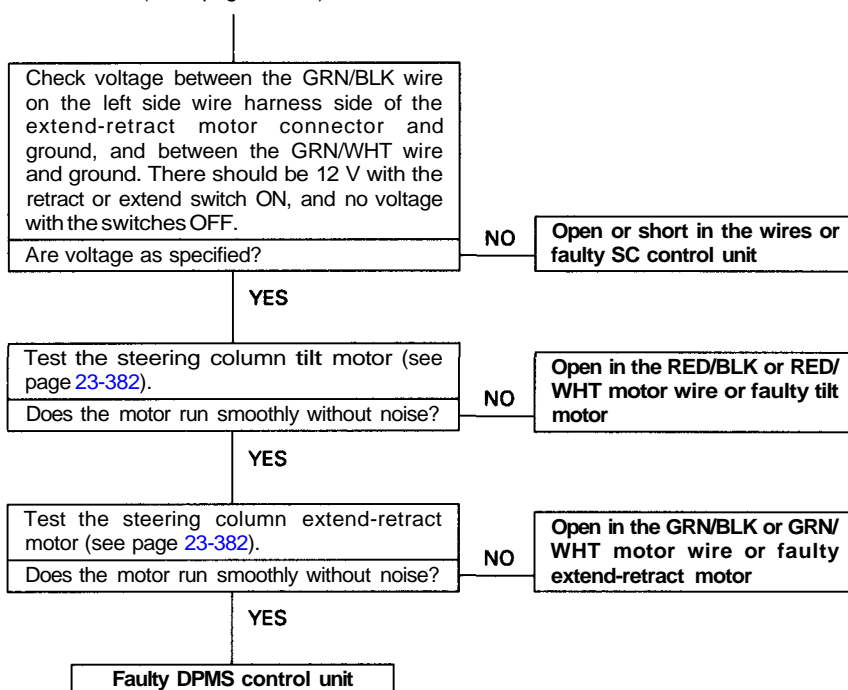

Flowchart No. 5

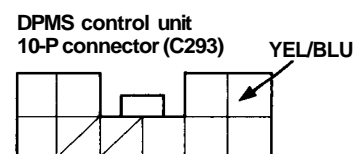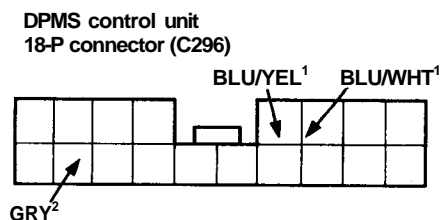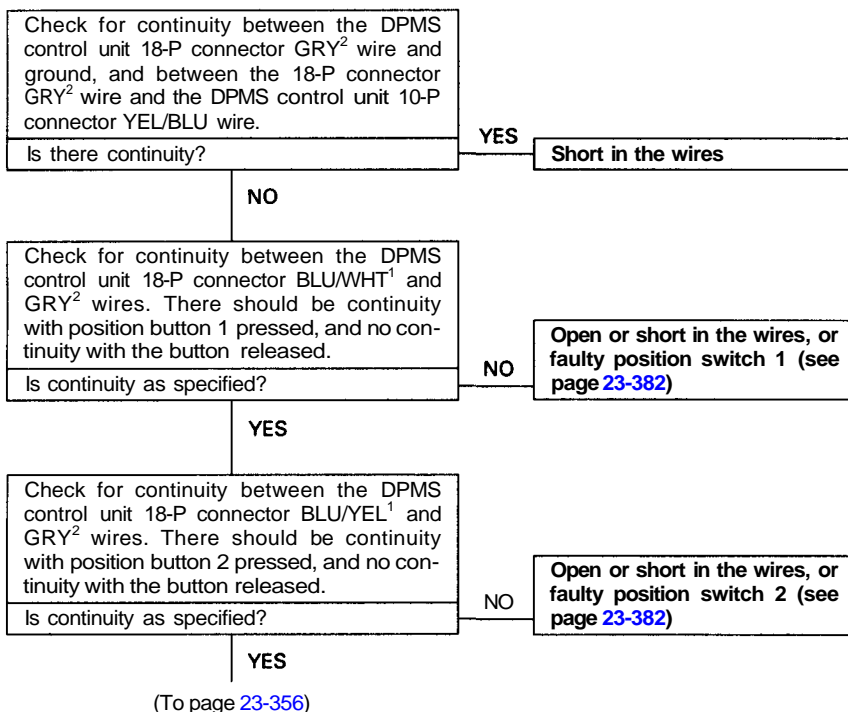

(cont'd)