


Driving Position Memory System (DPMS)

Steering Column Switch Test


CAUTION:

- Do not install used SRS parts from another car. When repairing an SRS, use only new parts.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Do not disassemble or tamper with the airbag assembly.

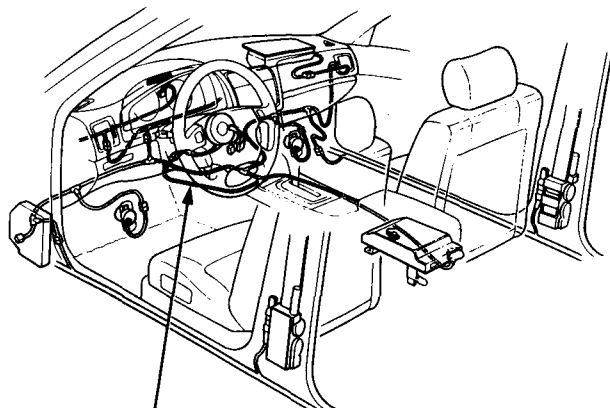

SRS MAIN HARNESS
(Covered with yellow outer insulation)

1. Pry the courtesy light controller and TCS switch (LS) out from the dashboard lower cover, then remove the three screws, and remove the dashboard lower cover (see page 23-180).
2. Remove the steering column tilt cover (see page 23-180).
3. Remove the steering column upper and lower cover (see page 23-181), and disconnect the steering column switch.
4. Remove the steering column switch from the steering column lower cover.

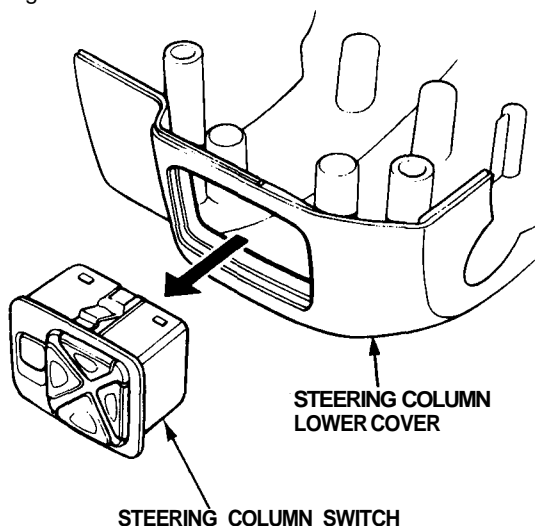

STEERING COLUMN LOWER COVER

STEERING COLUMN SWITCH

5. Check for continuity between the terminals in each switch position according to the table.

Terminal		A	B	C	D	E	F	G
Position								
TILT SWITCH	UP			○	○			
	DOWN		○	○				
EXTEND - RETRACT SWITCH	RETRACT			○	○			
	EXTEND	○	○					
AUTO SWITCH	ON						○	○
	OFF							

