


Driving Position Memory System (DPMS)

Power Seat Motor Test

CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat (see [section 20](#)), then disconnect the connectors from each motor.

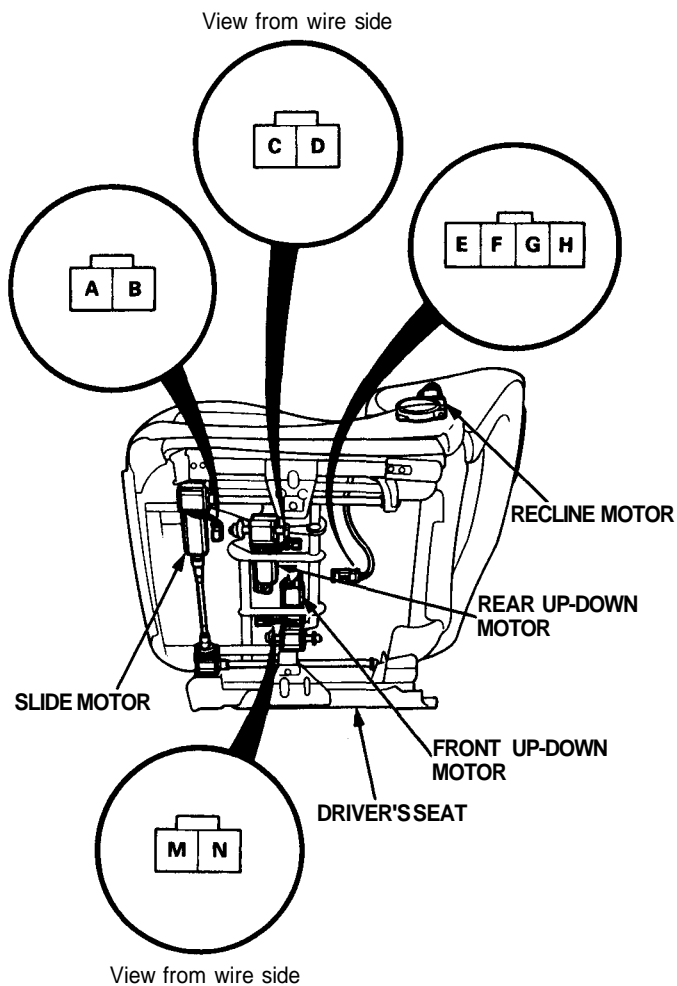

2. Test the motor in each direction by connecting power and ground according to the table.

CAUTION: When a motor stops running, disconnect the power terminal immediately.

SLIDE MOTOR:

| Terminal Position | A | B |
|----------------------|---|---|
| FORWARD | ⊕ | ⊖ |
| BACKWARD | ⊖ | ⊕ |

RECLINE MOTOR:

| Terminal Position | E | F |
|----------------------|---|---|
| FORWARD | ⊕ | ⊖ |
| RECLINE | ⊖ | ⊕ |

FRONT UP-DOWN MOTOR:

| Terminal Position | C | D |
|----------------------|---|---|
| UP | ⊖ | ⊕ |
| DOWN | ⊕ | ⊖ |

REAR UP-DOWN MOTOR:

| Terminal Position | M | N |
|----------------------|---|---|
| UP | ⊕ | ⊖ |
| DOWN | ⊖ | ⊕ |

NOTE: If a motor does not run, reverse the test leads. If the motor still does not run, it must be faulty.