



Power Seat Memory Sensor Test

CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat (see [section 20](#)), then disconnect the connectors from each motor.
2. Connect power and ground, and connect an analog ohmmeter test leads to each pair of terminals according to the table on the right.

NOTE: When battery power is connected, the motors will run.

CAUTION: When a motor stops running, disconnect power immediately.

SENSOR	Connect these terminals to power and ground		Connect these terminals to an ohmmeter	
SLIDE	A	B	I	J
RECLINE	E	F	G	H
FRONT UP-DOWN	M	N	O	P
REAR UP-DOWN	C	D	K	L

3. Check that the needle in the ohmmeter moves from left to right.

NOTE: If a motor does not run, reverse the test leads. If the motor still does not run, it must be faulty.

