


# Power Front Passenger's Seat

## Motor Test

**CAUTION:** Be careful not to damage the seats, the interior trim or the body.

1. Remove the passenger's seat (see [section 20](#)), then disconnect the connectors from each motor.

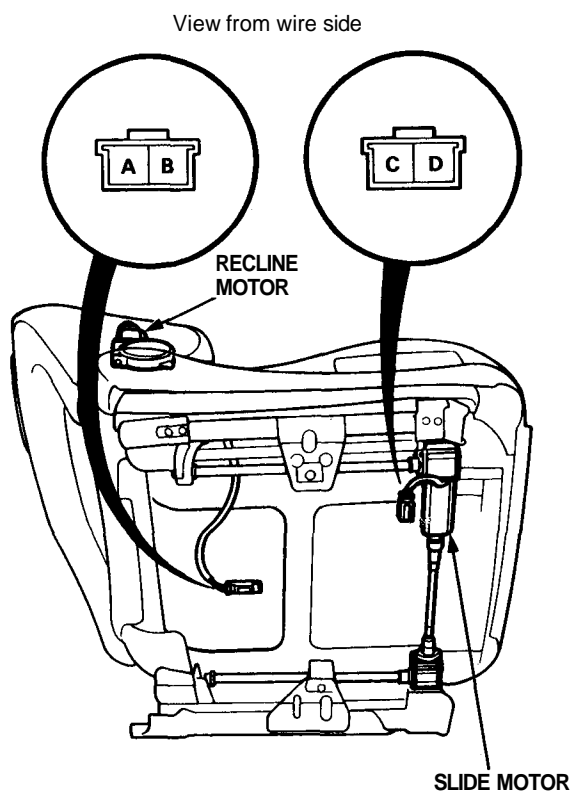

2. Test the motor in each direction by connecting power and ground according to the table.

**CAUTION:** When a motor stops running, disconnect power immediately.

### SLIDE MOTOR:

Terminal	C	D
Position		
FORWARD	⊖	⊕
BACKWARD	⊕	⊖

### RECLINE MOTOR:

Terminal	A	B
Position		
FORWARD	⊕	⊖
RECLINE	⊖	⊕

**NOTE:** If a motor does not run, reverse the test leads. If the motor still does not run, it must be faulty.