

Supplemental Restraint System (SRS)

Component Location Index

SRS INDICATOR LIGHT (In the gauge assembly)
Troubleshooting, page 23-406
Gauge assembly, page 23-133

CABLE REEL
Replacement, page 23-438

To CRUISE CONTROL SET/RESUME/CANCEL SWITCH

To DRIVER'S AIRBAG ASSEMBLY

To HORN

To GROUND

To RADIO REMOTE SWITCH

FRONT PASSENGER'S AIRBAG ASSEMBLY
(Airbag and Inflator)
Replacement, page 23-430
Disposal, page 23-433

RIGHT DASH SENSOR
Replacement, page 23-442

UNDER-DASH FUSE/RELAY BOX

LEFT DASH SENSOR
Replacement, page 23-442

DRIVER'S AIRBAG ASSEMBLY
(Airbag and Inflator)
Replacement, page 23-430
Disposal, page 23-433

FRONT PASSENGER'S SEAT BELT PRETENSIONER
Replacement, page 23-446
Disposal, page 23-434

SRS UNIT
(Including safing sensor)
Replacement, page 23-444

DRIVER'S SEAT BELT PRETENSIONER
Replacement, page 23-446
Disposal, page 23-434