


Maintenance

Transmission Oil

NOTE: Check the oil with the engine OFF, and the car on level ground.

1. Remove the oil filler plug, then check the level and condition of the oil.

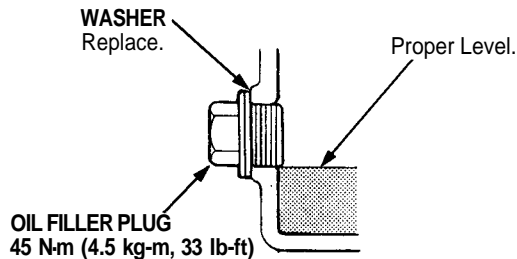

2. The oil level must be up to the fill hole. If it is below the hole, add oil until it runs out, then reinstall the oil filler plug with a new washer.
3. If the transmission oil is dirty, remove the drain plug and drain the oil.
4. Reinstall the drain plug with a new washer, and refill the transmission oil to the proper level.

NOTE: The drain plug washer should be replaced at every oil change.

5. Reinstall the oil filler plug with a new washer.


NOTE: If the transmission is overhauled, after test running, recheck the oil level.

Oil Capacity


2.3 ℓ (2.4 US qt, 2.0 Imp qt) at oil change.

2.6 ℓ (2.7 US qt, 2.3 Imp qt) at overhaul.

Use only SAE10 W — 30 or 10 W — 40, API Service SF or SG grade.

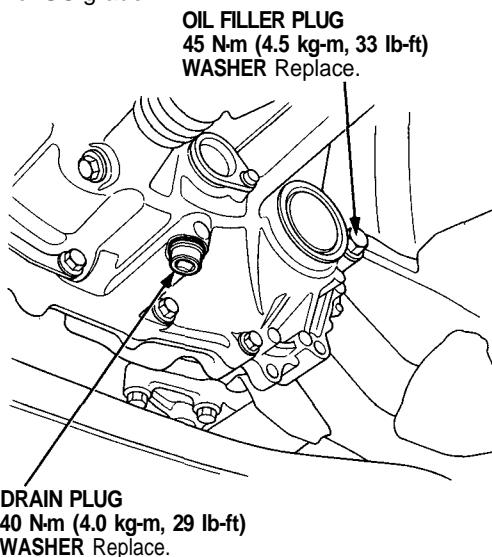

 Back-up Light Switch, Neutral Position Switch

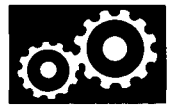

Replacement

NOTE: To check the switch see [section 23](#).

1. Disconnect the connector, then remove the switch connector from the connector clamp.
2. Remove the switch.
3. Install the new washer and switch.

