



5th Gear

Removal

1. Remove 5th gear following the numbered sequence.

NOTE: Countershaft locknut have left-hand threads.

