



Power Seat Switch Test

CAUTION: Be careful not to damage the seat, the interior trim or the body.

1. Remove the driver's seat, then remove the power seat switch.
2. Check for continuity between the terminals in each switch position, according to the table.

| Terminal | | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | Q | R |
|---------------|----------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Position | | | | | | | | | | | | | | | | | | | |
| SLIDE | FORWARD | | ○ | | | | | | | ○ | | | | | | | | | |
| | NEUTRAL | | ○ | ○ | | | | ○ | ○ | | | | | | | | | | |
| | BACKWARD | | | ○ | | | | | | ○ | | | | | | | | | |
| RECLINE | FORWARD | | | | ○ | | | | | | ○ | | | | | | | | |
| | NEUTRAL | ○ | | | ○ | | | | | | | | ○ | ○ | | | | | |
| | BACKWARD | | | | | | | | | | ○ | | ○ | | | | | | |
| FRONT UP-DOWN | UP | | | | | | | | ○ | ○ | | | | | | | | | |
| | NEUTRAL | | ○ | ○ | | | | ○ | ○ | | | | | | | | | | |
| | DOWN | | | | | | | ○ | ○ | | | | | | | | | | |
| REAR UP-DOWN | UP | ○ | | | | | | | | | ○ | | | | | | | | |
| | NEUTRAL | ○ | | | ○ | | | | | | | | ○ | ○ | | | | | |
| | DOWN | | | | | | | | | | ○ | | ○ | | | | | | |

