


# Power Driver's Seat, With Memory

## Motor Test

**CAUTION:** Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat, then disconnect the connectors from each motor.

View from wire side

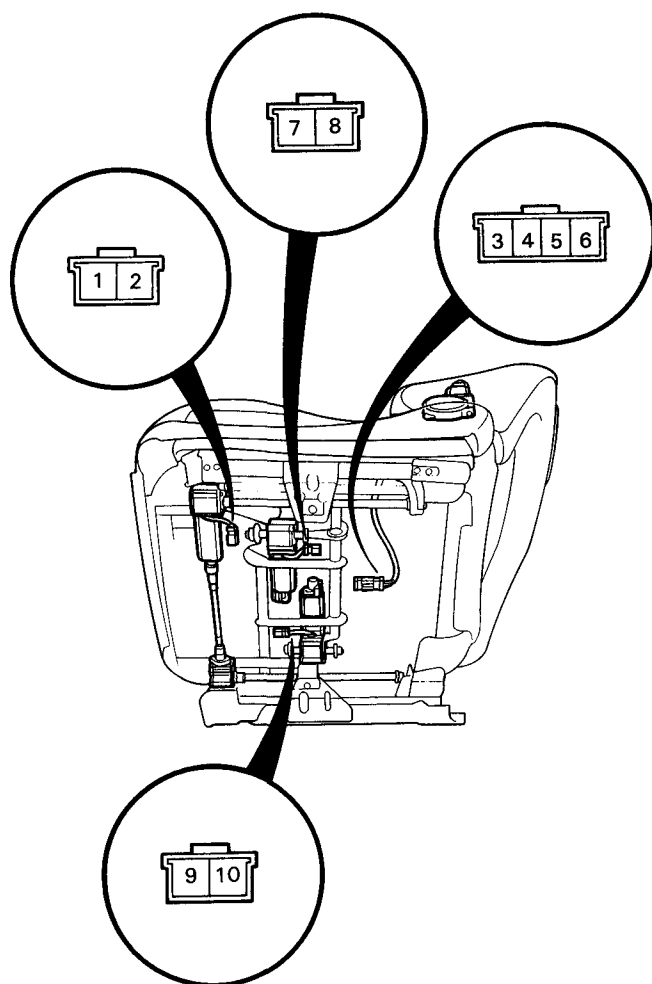

View from wire side

2. Test the motor.

**CAUTION:** When a motor stops running, disconnect the power terminal immediately.

### WHOLE SEAT:

Terminal	1	2
Position		
FORWARD	⊕	⊖
BACKWARD	⊖	⊕

### SEAT BACK:

Terminal	3	4
Position		
FORWARD	⊕	⊖
RECLINE	⊖	⊕

### SEAT BOTTOM:

Terminal	7	8	9	10
Position				
FRONT UP			⊕	⊖
FRONT DOWN			⊖	⊕
REAR UP	⊖	⊕		
REAR DOWN	⊕	⊖		

**NOTE:** If a motor does not run, reverse the test leads. If the motor still does not run, it must be faulty.