

Power Driver's Seat, With Memory

Recline Memory Limit Switch Test



CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat, then disconnect the connector from the recline memory limit switch and recline motor.
2. Check for continuity between the terminals according to the table.

Terminal	5	6
Seat back angle		
A area		
B area		

NOTE: When battery power is connected to terminals No. 1 and No. 2, the recline motor will run.

CAUTION: When a motor stops running, disconnect power immediately.

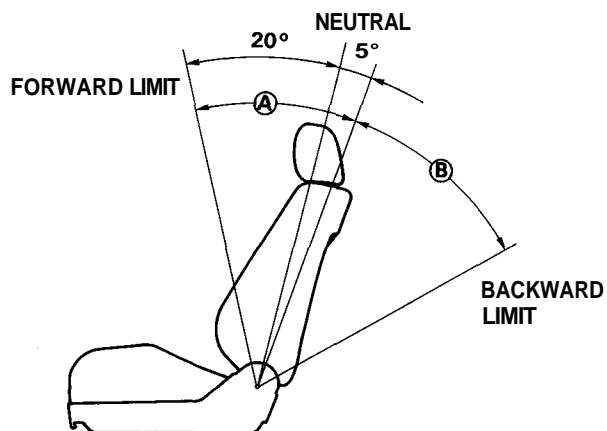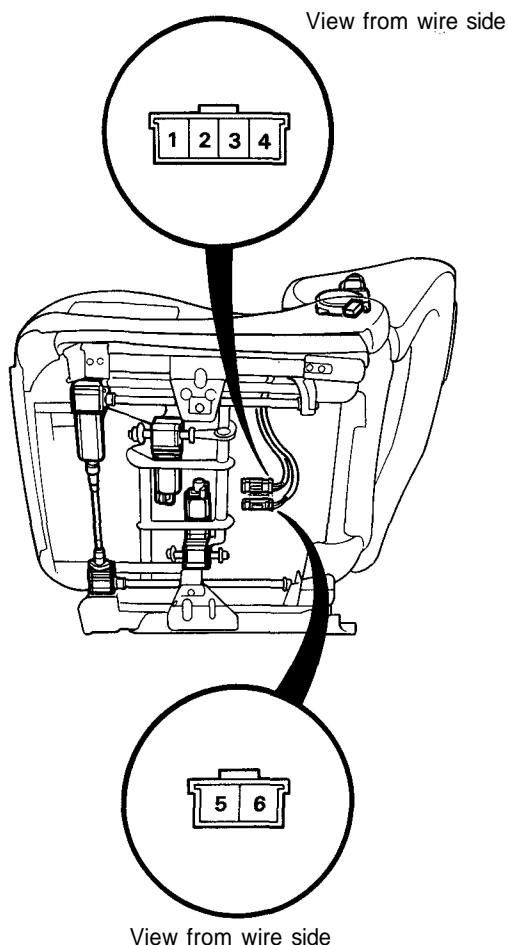

NOTE: If the motor does not run, reverse the test leads. If the motor still does not run, the motor must be faulty.