



## Memory Switch Test

1. Remove the driver's door panel, then disconnect the 8-P connector from the power seat memory switch.
2. Remove the memory switch, then check for continuity between the terminals in each switch position, according to the table.

Terminal		A	B	C	D	E	F	G	H
Position									
MEMORY SWITCH	ON					○	—	○	
	OFF								
POSITION SWITCH 1	ON					○	—	○	
	OFF								
POSITION SWITCH 2	ON			○	—	○			
	OFF								
ILLUMINATION		○	—	○					

