

Power Driver's Seat, Without Memory

Power Seat Switch Test

CAUTION: Be careful not to damage the seat, the interior trim or the body.

- 1. Remove the driver's seat, then remove the power seat switch.
- 2. Check for continuity between the terminals in each switch position, according to the table.

Terminal		A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
Position																			
SLIDE	FORWARD		○							○									
	NEUTRAL		○	○			○		○	○									
	BACKWARD		○							○									
RECLINE	FORWARD				○						○								
	NEUTRAL	○			○	○							○	○					
	BACKWARD				○	○					○		○						
FRONT UP-DOWN	UP						○	○	○	○									
	NEUTRAL		○	○			○	○	○										
	DOWN							○		○									
REAR UP-DOWN	UP	○				○					○								
	NEUTRAL	○			○	○							○	○					
	DOWN	○			○						○		○						

