




Motor Test

CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat, then disconnect the connectors from each motor.

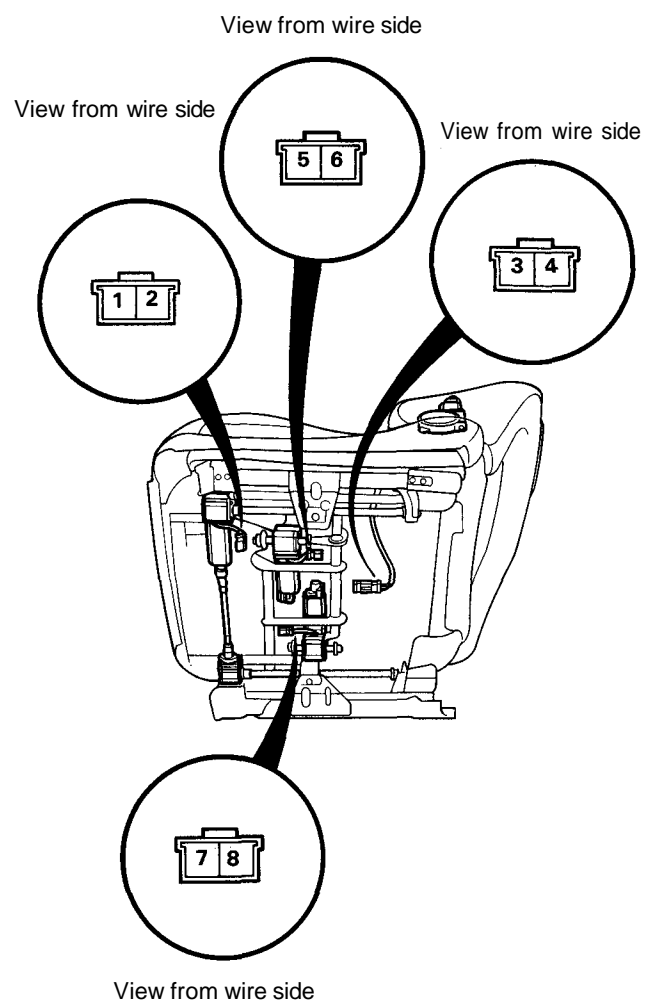

2. Test the motors.

CAUTION: When a motor stops running, disconnect power immediately.

WHOLE SEAT:

Terminal	1	2
Position		
FORWARD	+	-
BACKWARD	-	+

SEAT BACK:

Terminal	3	4
Position		
FORWARD	+	-
RECLINE	-	+

SEAT CUSHION:

Terminal	5	6	7	8
Position				
FRONT UP			+	-
FRONT DOWN			-	+
REAR UP	-	+		
REAR DOWN	+	-		

NOTE: If a motor does not run, reverse the test leads. If the motor still does not run, it must be faulty.