


# Lubrication Points

For the details of lubrication points and types of lubricants to be applied, refer to the Illustrated Index and various work procedures (such as Assembly/Reassembly, Replacement, Overhaul, Installation, etc.) contained in each section.

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: Use "Energy Conserving II" SG grade oil 5 W—30 preferred SAE Viscosity: See chart below.
2	Transmission Manual Automatic	API Service Grade: SF or SG SAE Viscosity: 10 W—30 or 10 W—40 Honda Premium Formula Automatic Transmission Fluid or an equivalent DEXRON® II Automatic Transmission Fluid (ATF)
3	Brake Line	Brake fluid DOT3 or DOT4
4	Clutch Line	Brake fluid DOT3 or DOT4
5	Power steering gearbox	Steering grease P/N 08733—B070E
6 7	Shift lever pivots (Manual) Release fork (Manual)	Silicone grease with molybdenum disulfide
8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	Steering boots Steering column bushings Steering ball joints Select lever (Automatic) Pedal linkage Intermediate shaft Brake master cylinder pushrod Trunk hinges Door hinges upper and lower Door opening detents Fuel filler lid Engine hood hinges and engine hood latch Clutch master cylinder pushrod Throttle cable end Shift cable end and select cable end	Multi-purpose grease
23	Caliper Piston seal, Dust seal, Caliper pin, Piston	Silicone grease
24	Power steering system	Honda power steering fluid-V
25	Differential	Differential Oil Hypoid gear oil classified GL4 or GL5 Viscosity: SAE90: above 0°F (−18°C) SAE80W 90: below 0°F (−18°C)

Recommended Engine Oil  
API Service Grade: Use "Energy Conserving II"  
SG grade oil 5 W—30 preferred

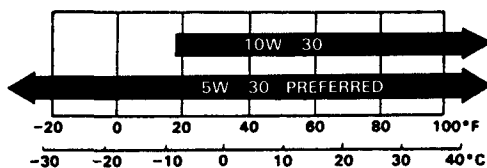

Engine oil viscosity for  
ambient temperature ranges

