

Problem Code 4-1 to 4-8: Speed Sensor

CAUTION: Use only the digital multimeter to check the system.

NOTE: If a malfunction is detected, this code appears and the fail-safe function is activated. The indicator light comes ON after restarting the engine until the malfunction code is erased (by disconnecting the ABS 2 fuse for 3 seconds).

