

Troubleshooting

Flowcharts (cont'd)

Problem Code 5 to 5-8: Speed Sensor(s)

CAUTION: Use only the digital multimeter to check the system.

NOTE: If a malfunction is detected, this code appears and the fail-safe function is activated. The indicator light comes ON after restarting the engine until the malfunction code is erased (by disconnecting the ABS 2 fuse for 3 seconds).

