


Problem Code 6-4: Rear Fail-Safe Relay Circuit

CAUTION: Use only digital multimeter to check the system.

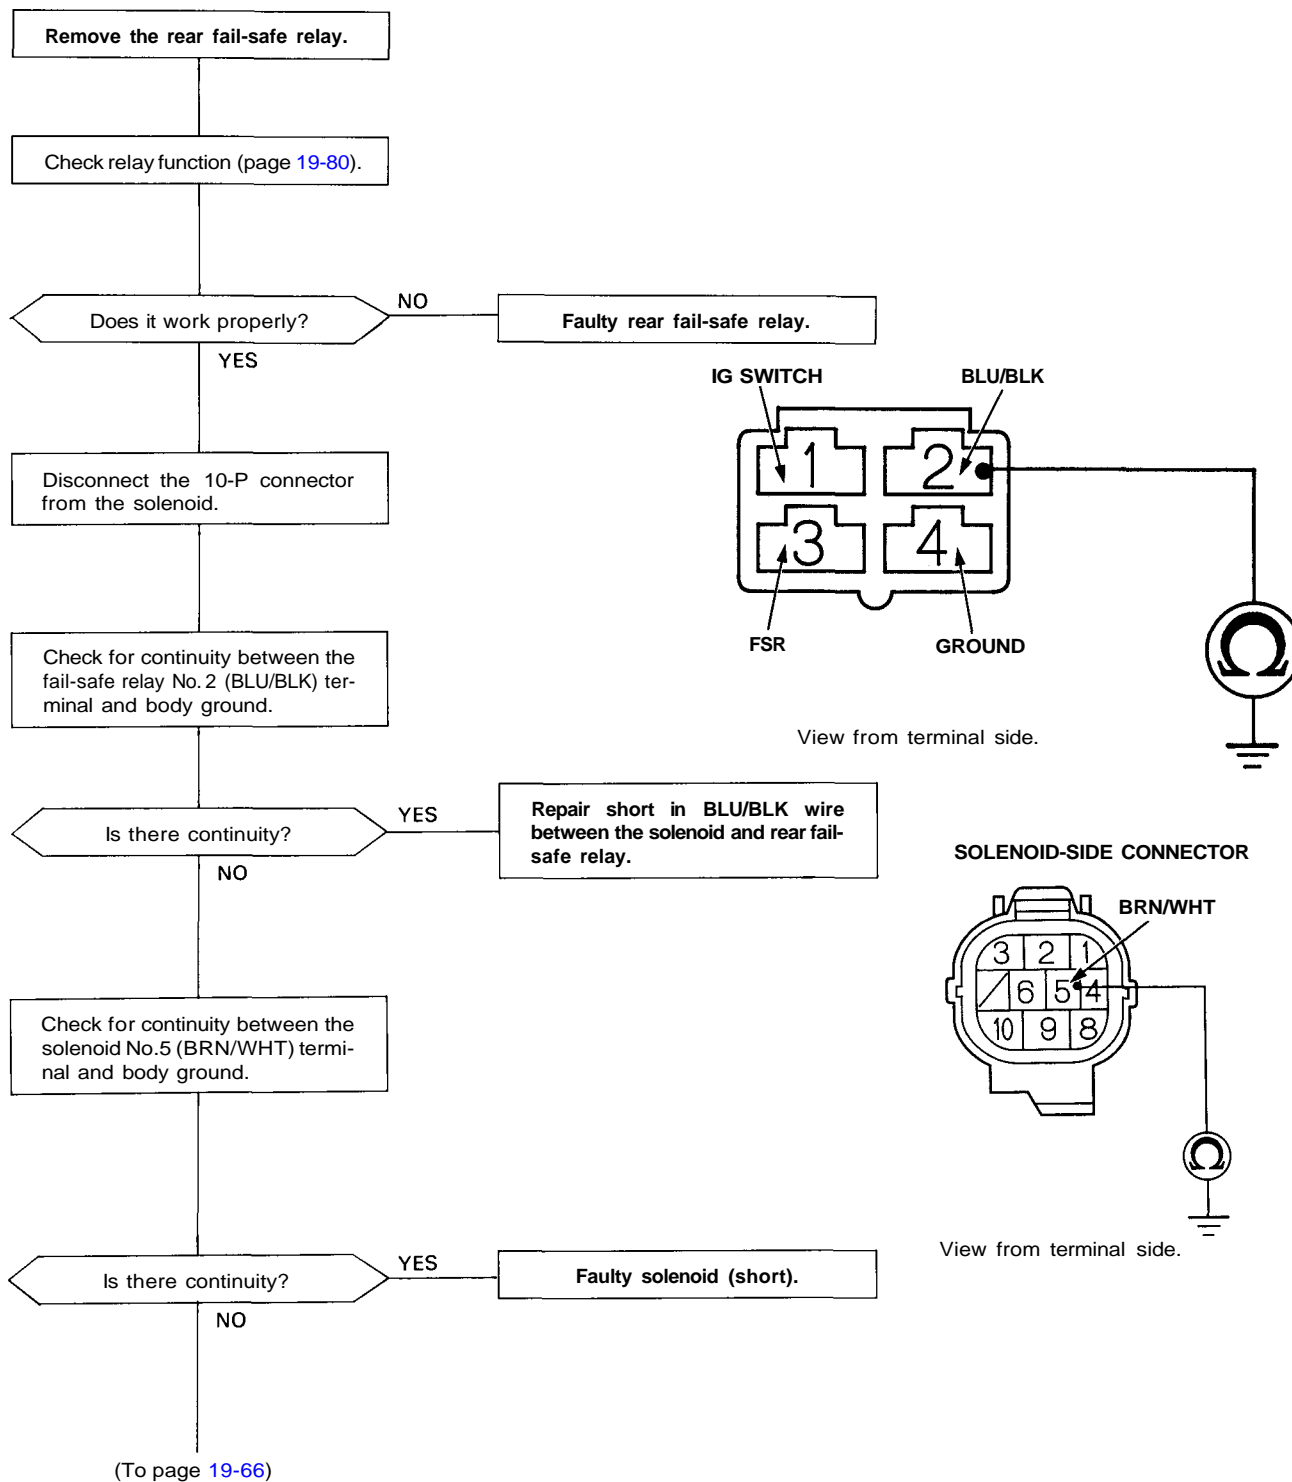

Troubleshooting

Flowcharts (cont'd)


(From page 19-65)

Disconnect the 18-P and 12-P connector from the control unit.

Check each wire for continuity between the control unit and body ground.

No. 11 (RED/WHT): Rear Inlet
No. 6 (YEL/WHT): Rear Outlet

12-P CONNECTOR

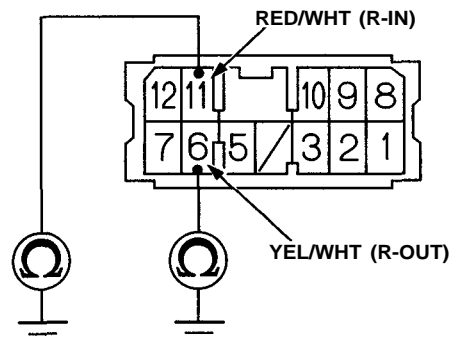

View from control unit terminal side.

Is there continuity?


YES

Repair short in wire between the solenoid and control unit
RED/WHT: Rear Inlet
YEL/WHT: Rear Outlet

NO

Check for continuity between the No. 17 (YEL/GRN) terminal and body ground.

18-P CONNECTOR

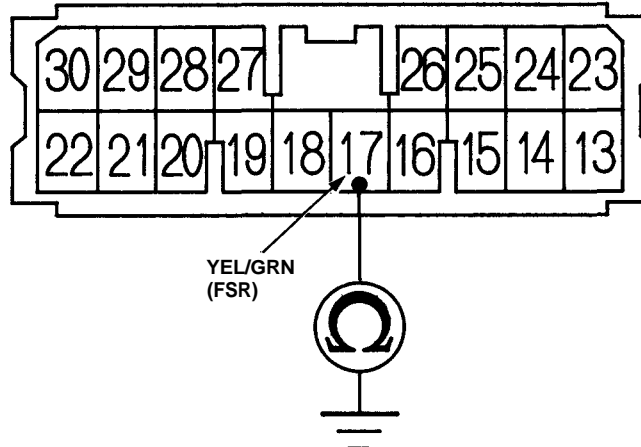

View from control unit terminal side.

Is there continuity?

YES

Repair short in YEL/GRN wire between the control unit and rear fail-safe relay.

NO

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.