



## Heater Disassembly

Remove the heater core cover, remove the pipe clamps, then lift out the heater core.

