

Heater-Evaporater

Evaporator Disassembly/Reassembly

1. Remove the upper half of the housing, the remove the evaporater.
2. Remove the expansion valve if necessary.
3. Assemble the heater-evaporator unit in the reverse order of disassembly. Hold the expansion valve capillary tube down against the suction line, and wrap it with tape to hold it there.

