


# Coolant Temperature Sensor

## Replacement


1. Remove the dashboard lower panel.
2. Disconnect the 7-P connector of max cool motor and clamp, then remove the clip.
3. Remove the coolant temperature sensor from the heater evaporator unit as shown.

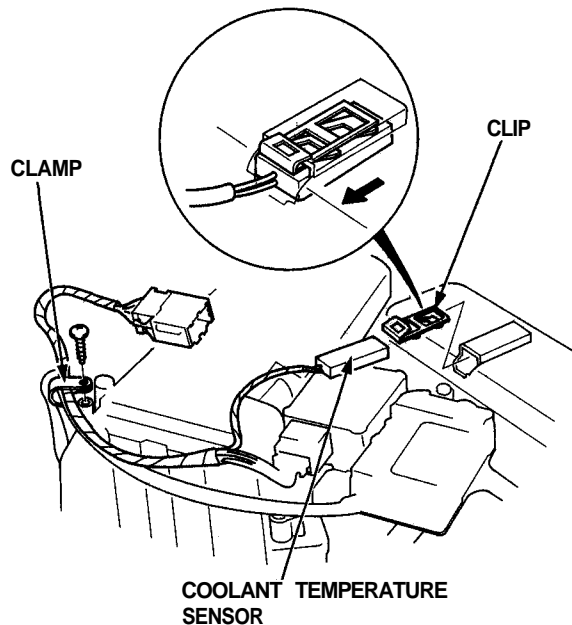

## Test

Compare the resistance reading between terminals of the coolant temperature sensor with specifications shown in the following graph: It should be within specification.

**Resistance at 68°F (20°C): approx. 7kΩ.**

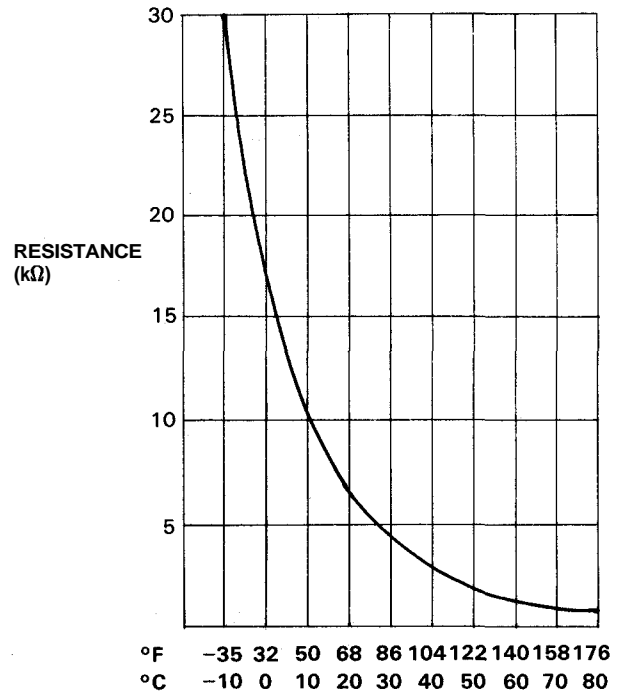

- Use DIGITAL MULTIMETER (KS-AHM-32-003) or equivalent.
- Use 20 kΩ range.

