


Lighting System

Combination Light/Turn Signal Switch Test


CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.


1. Remove the dashboard lower cover.
2. Disconnect the 14-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the table.

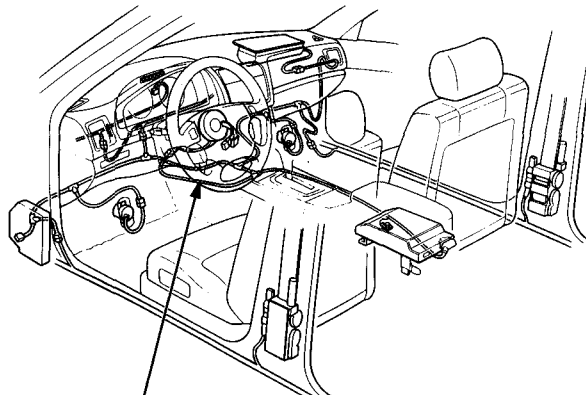

SRS MAIN HARNESS

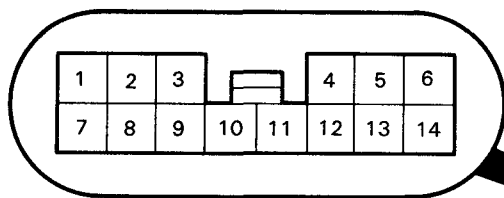

View from wire side

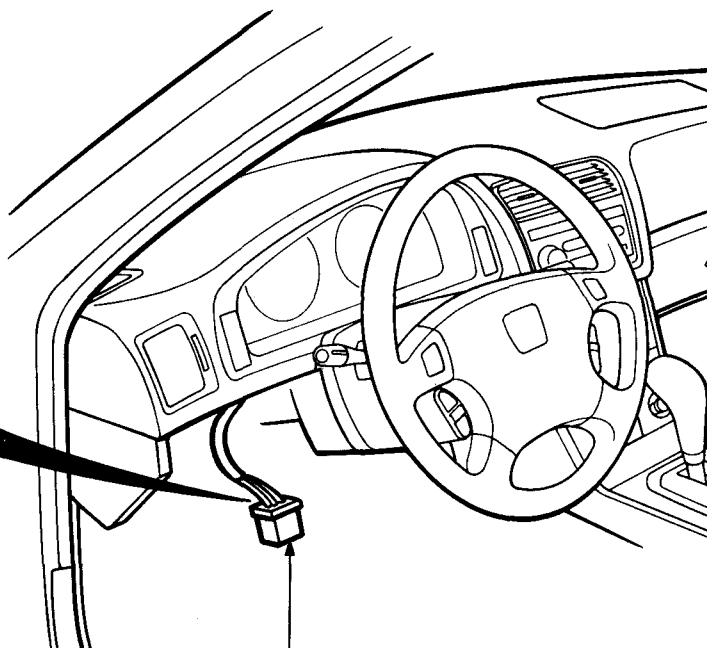

14-P CONNECTOR



Headlight/Dimmer/Passing Switch

Terminal		2	3	11	12
Position					
Headlight Switch	OFF				
	•	○	○		
	●	○	○		○
Dimmer Switch	LOW				
	HIGH	○		○	
Passing Switch	OFF				
	ON	○		○	○

Turn Signal Switch

Terminal		4	5	6
Position				
RIGHT		○		◀○
CENTER				
LEFT			○	◀○