

# Wipers/Washers

## Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom		Item to be inspected	Blown No. 26 (30A) fuse (In the under-hood fuse/relay box)	Blown No. 23 (7.5A) fuse (In the under-dash fuse box)	Wiper switch	Mist switch	Wiper motor assembly	Washer switch	Washer motor	Intermittent wiper relay	Wiper low relay	Wiper high relay	Intermittent wiper circuit (In the integrated control unit)	Combined operation with wiper/ washer (In the integrated control unit)	Insufficient washer fluid in reservoir	Disconnected or blocked washer hose, or clogged outlet	Disconnected wiper linkages	Intermittent dwell time controller	Poor ground	Open circuit, loose or disconnected terminals
Wipers do not operate.	In all positions		1		4		2										3		G151	GRN/BLK
	In INT			1	4		5			2	3		6						G151 G152 G251 G301	YEL/GRN <sup>2</sup> GRN BLU/WHT <sup>2</sup>
	In LO			1	4		5			2	3		6						G152 G251 G301	YEL/GRN <sup>1</sup> BLU/RED
	In HI			1	3		4					2							G152 G251 G301	BLU/GRN BLK/YEL
	In MIST			1		3				2									G152 G251 G301	YEL/GRN <sup>2</sup> BLU/GRN
Blades do not return to park position when wipers are turned OFF.					2		1													BLU/WHT <sup>2</sup>
Erratic intermittent cycle or wipers do not operate inter- mittently.					1								3					2		BLU/RED, GRN/YEL or GRN/WHT
Little or no washer fluid is pumped.				1				4	5						2	3			G152	BLK/YEL
Wipers do not operate simultane- ously with washer.														1						BLU/RED