



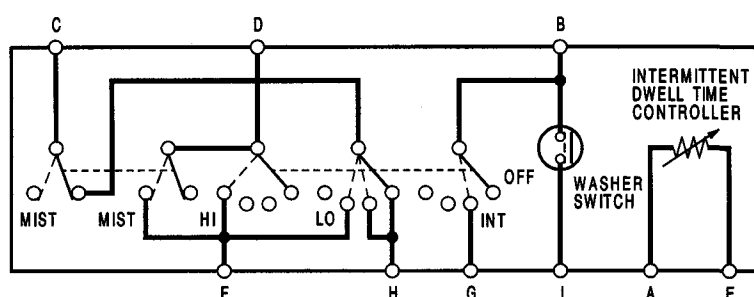

Wipers/Washers

Wiper/Washer Switch Test

1. Remove the dashboard lower cover (see [section 20](#)).
2. Disconnect the 10-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the table.

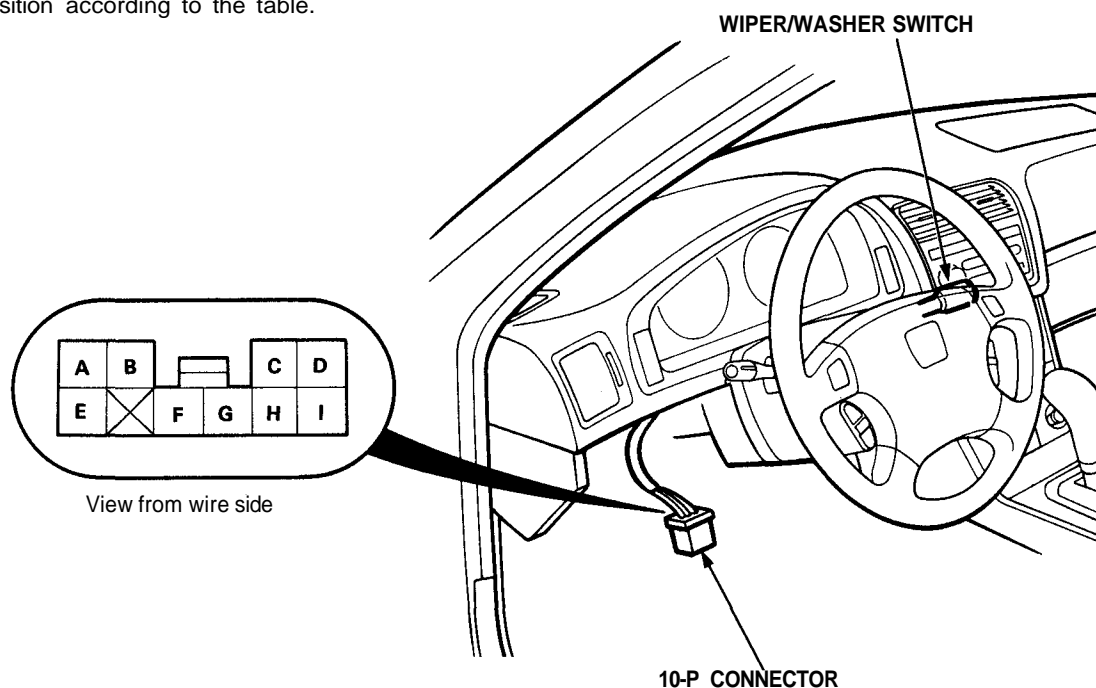

Terminal	A	B	C	D	E	F	G	H	I
Position									
INT									
LO									
HI									
Mist switch "ON"									
Washer switch "ON"									
Intermittent controller turned									