


Wipers/Washers

Windshield Wiper Motor Test

1. Open the hood, and remove the cap nuts and the wiper arms.

NOTE: Carefully remove the wiper arms so that they do not touch the hood.

2. Remove the windshield lower molding, hood seal, and air scoop by prying out their trim clips and removing the screws.

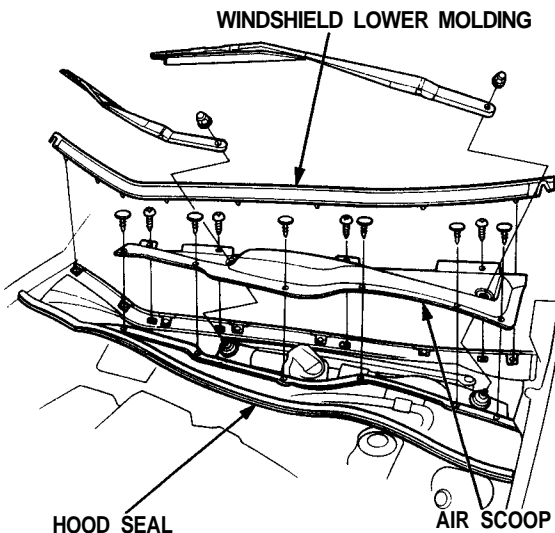



3. Disconnect the 5-P connector from the wiper motor assembly.

4. Test motor operation:

LOW SPEED: Connect battery power to the B (GRN/BLK) terminal and ground to the Lo (BLU/YEL) terminal.

HIGH SPEED: Connect battery power to the B (GRN/BLK) terminal and ground to the Hi (BLU/YEL) terminal.

5. If the motor fails to run smoothly, replace it.

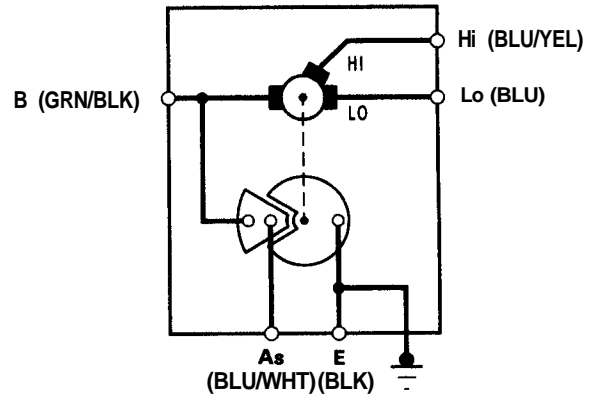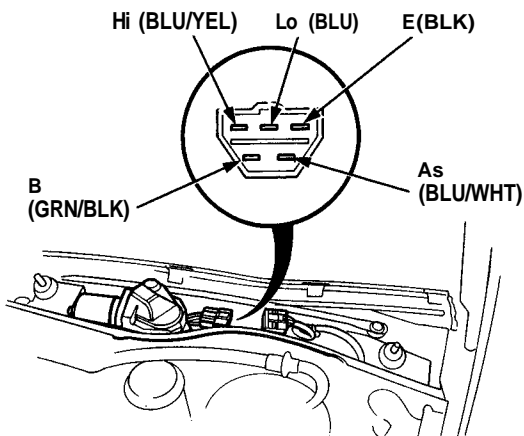

6. Reconnect the 5-P connector to the wiper motor assembly.
7. Connect an analog voltmeter between the As (BLU/WHT) and the E (BLK) terminals. Run the motor by turning the wiper switch ON (Lo or Hi position).

The voltmeter should alternately indicate 0 V and more than 4 V.