

Security Alarm System

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		In the under-hood fuse/relay box		In the under-dash fuse box		Faulty indicator light (LED)	Horn circuit	Starting system	A/T: Shift lever position switch M/T: Clutch interlock switch	Lighting system	Door key switch	Ignition key switch	Trunk key cylinder switch	Trunk latch switch	Hood switch	Door switch	Control unit input	Poor ground	Open circuit, loose or disconnected terminals
Symptom		Blown No. 15 (7.5A) fuse	Blown No. 20 (7.5A) fuse	Blown No. 39 (20A) fuse															
Security alarm can't be set (and indicator light does not flash).		1	2	3	4							5						G301 G302	YEL/BLU, BLK/ RED, WHT/GRN, GRN/RED or BLU/WHT
Starting system is not operated.								1	2								3	G301 G302	BLK/WHT (BLU) or BLK/YEL (BLU): M/T
Security alarm can be set, but alarm does not operate when the trunk, hood or either door is unlocked without the key.	Horn alarm			1		2											3		WHT/GRN, BLU, or BLU/RED
	Headlight alarm									1							2		BLU/RED ² or RED/GRN
	Both alarms																1		
Alarm not cancelled when the door is opened with the key.											1						2	G301 G302 G304	GRN/RED ² , GRN/BLU ¹ , GRN/BLK or BLU/RED ³
Alarm not cancelled when the key is inserted in the ignition switch.			1									2					3		BLK/RED or BLU/WHT
Alarm not cancelled when the trunk lid is opened with the key.													1	2			3	G451	GRN/RED ¹ or BLU/GRN
Alarm does not operate when the hood is opened.															1		2	G153	YEL/RED
Alarm does not operated when the door is opened.																1	2	G301 G302 G304 G251	GRN/BLU, GRN/RED ³ , GRN/YEL or GRN/WHT ¹