

# Electrical Troubleshooting

## Troubleshooting Flowchart (cont'd)

D4 indicator light does not come on with the ignition switch ON. (It should come on for about 2 seconds.)

Is the service check connector jumped?

YES

Disconnect the jumper wire and recheck.

NO

Shift to **D4** position.

Does the **D4** indicator light come on?

YES

Check for loose ECU connectors. If necessary, substitute a known-good ECU and recheck.

NO

Turn the ignition switch OFF.

Disconnect the E(26P) connector from the ECU.

Check for continuity between the E3 (BLK) terminal and body ground and E4 (BLK) and body ground.

Is there continuity?

NO

Repair open BLK wire between E3 and E4 terminal and G101.

YES

Turn the ignition switch ON.

Measure voltage between the E1 or E2 (BLK/YEL) and E3 or E3 (BLK) terminals.

To page 14-71

NOTE: View from terminal side.



