




# Ignition Switch


## Test

- 1. Remove the dashboard lower panel. (See page 23-81).
- 2. Disconnect the 7-P connector from the under-dash fuse box.
- 3. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	WHT/ RED (ACC)	WHT (BAT)	BLK/ YEL (IG1)	YEL (IG2)	BLK/ WHT (ST)
O					
I	○ — ○				
II	○ — ○	○ — ○	○ — ○	○ — ○	
III		○ — ○	○ — ○		○ — ○

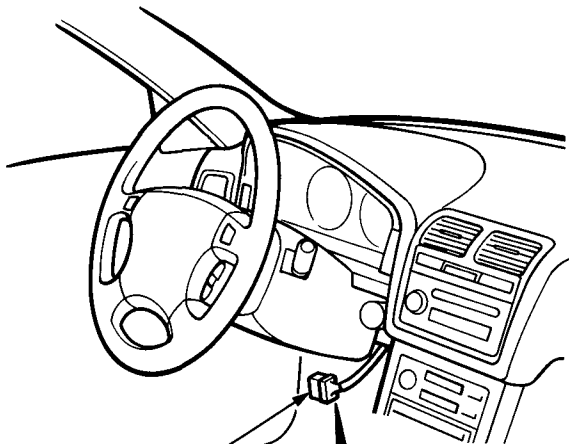

7-P CONNECTOR

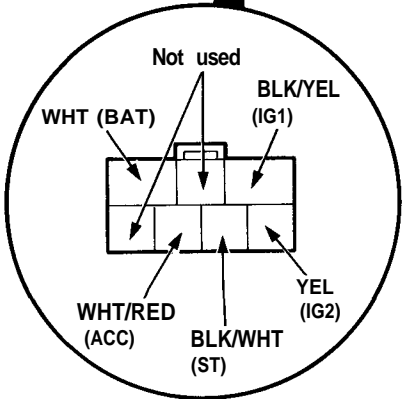

## Electrical Switch Replacement

- 1. Remove the dashboard lower panel (See page 23-81).
- 2. Disconnect the 7-P connector from the under-dash fuse box.
- 3. Insert the key and turn it to "0".
- 4. Remove the 2 screws and replace the switch.

