

Speedometer/Tripmeter/Odometer


Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected								
Symptom	Blown No. 13 (15A) fuse (in the under-dash fuse box)	Speedometer	Odo/Tripmeter	Printed circuit panel A	Speed sensor input test	Speed sensor is not installed correctly	Poor ground	Open circuit in wires or loose or disconnected terminals
Speedometer operates, but reads wrong.				2		1		
Odo/tripmeter operates, but registers wrong.				2		1		
Odometer and tripmeter operate, but speedometer does not operate.		1		2				
Speedometer operates, but odometer and tripmeter do not operate.			1	2				
Speedometer, odometer and tripmeter do not operate.	1			3	2		G101 G301 G302	GRN/WHT YEL

NOTE: Speed sensor ground is via ECU (G101).

Speedometer does not operate.

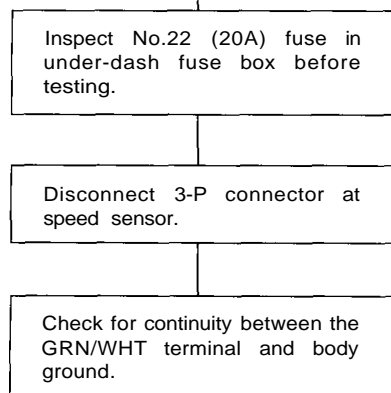

A

(To [next page](#))

