




Amplifier Unit Terminals

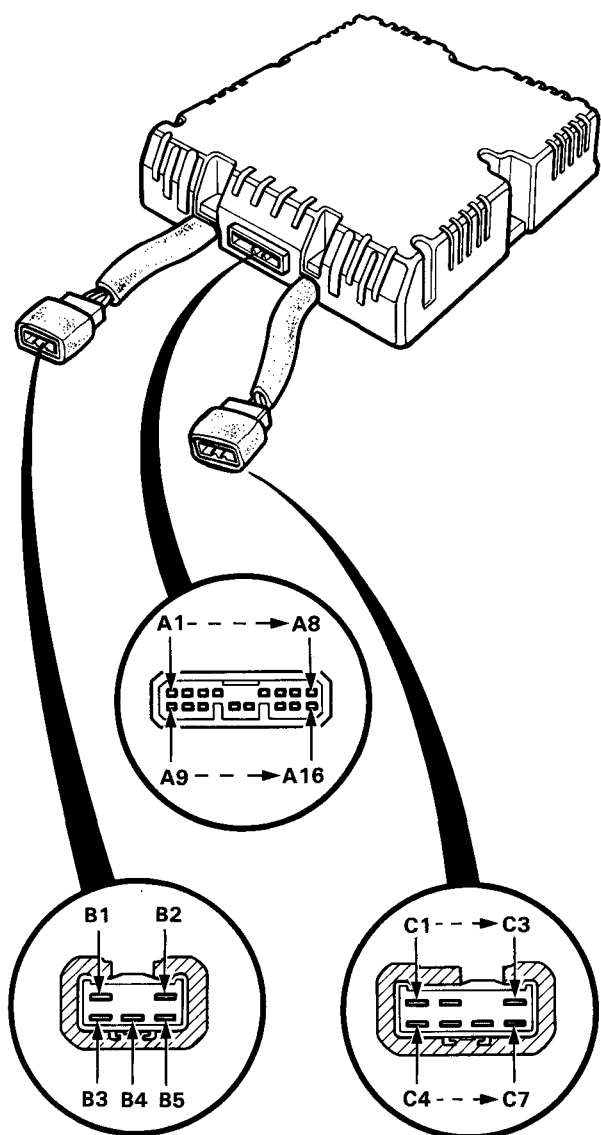

Terminal	Wire	Destination
A1	ORN	Radio (Left rear speaker ⊕)
A2	GRN	Radio (Left rear speaker ⊖)
A3	YEL	Radio (Right rear speaker ⊕)
A4	RED	Radio (Right rear speaker ⊖)
A5	BLU	Radio (Right front speaker ⊕)
A6	BRN	Radio (Right front speaker ⊖)
A7	WHT	Radio (Left front speaker ⊕)
A8	BLK	Radio (Left front speaker ⊖)
A9	—	(Not used)
A10	—	(Not used)
A11	—	(Not used)
A12	—	(Not used)
A13	—	(Not used)
A14	—	(Not used)
A15	—	(Not used)
A16	YEL/WHT	Radio switched power (from radio)

B1	RED	Right rear speaker ⊕)
B2	BLU	Left rear speaker ⊕)
B3	BRN	Right rear speaker ⊖)
B4	—	(Not used)
B5	GRY	Left rear speaker ⊖)

C1	RED/GRN	Right front speaker ⊕)
C2	—	(Not used)
C3	BLU/GRN	Left front speaker ⊕)
C4	BRN/BLK	Right front speaker ⊖)
C5	WHT	Constant power
C6	BLK	Ground (G253)
C7	GRY/BLK	Left front speaker ⊖)