

Power Door Locks


Driver's Door Actuator Test

- 1. Remove the door trim panel.
- 2. Disconnect the 8-P connector from the actuator.
- 3. Test actuator operation:

LOCK: With battery positive connected to the No. 2 terminal, connect negative to the No. 5 terminal momentarily.

UNLOCK: With battery positive connected to the No. 5 terminal, connect negative to the No. 2 terminal momentarily.

CAUTION: To prevent damage to the motor, only apply battery voltage momentarily.

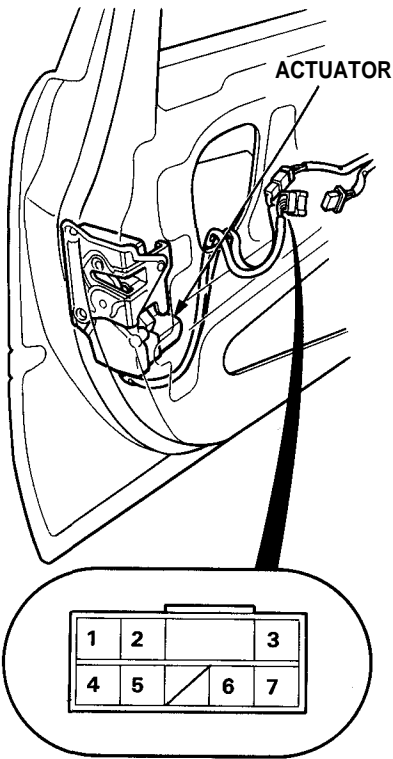

View from wire side

- 4. If the actuator fails to operate properly, replace it

- 5. Check for continuity between the terminals in each switch position according to the table.

Terminal	8	7	3
Position			
LOCK			
UNLOCK			

