



Passenger Door Actuator Test


Right Front Door:

1. Remove the door trim panel.
2. Disconnect the 8-P connector from the actuator.
3. Test actuator operation:

LOCK: With battery positive connected to the No. 2 terminal, connect negative to the No. 5 terminal momentarily.

UNLOCK: With battery positive connected to the NO. 5 terminal, connect negative to the No. 2 terminal momentarily.

CAUTION: To prevent damage to the motor, only apply battery voltage momentarily.

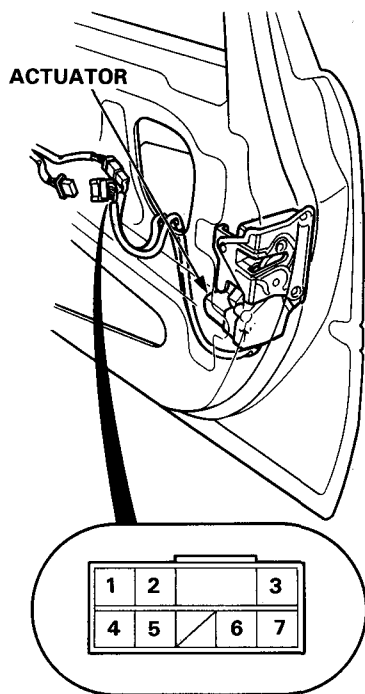


View from wire side

4. If the actuator fails to operate properly, replace it.

5. Check for continuity between the terminals in each switch position according to the table.

| Terminal | 7 | 3 |
|----------|-------|-------|
| Position | | |
| LOCK | | |
| UNLOCK | ○ — ○ | ○ — ○ |

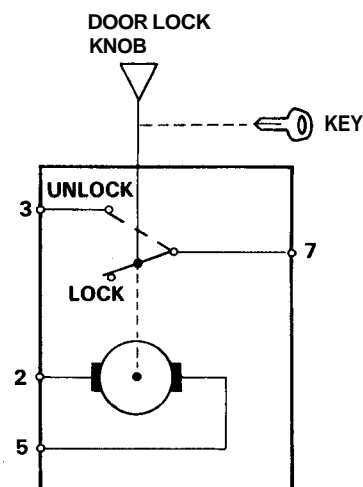

(cont'd)