


# Power Driver's Seat, With Memory

## Power Seat Control Unit Terminals

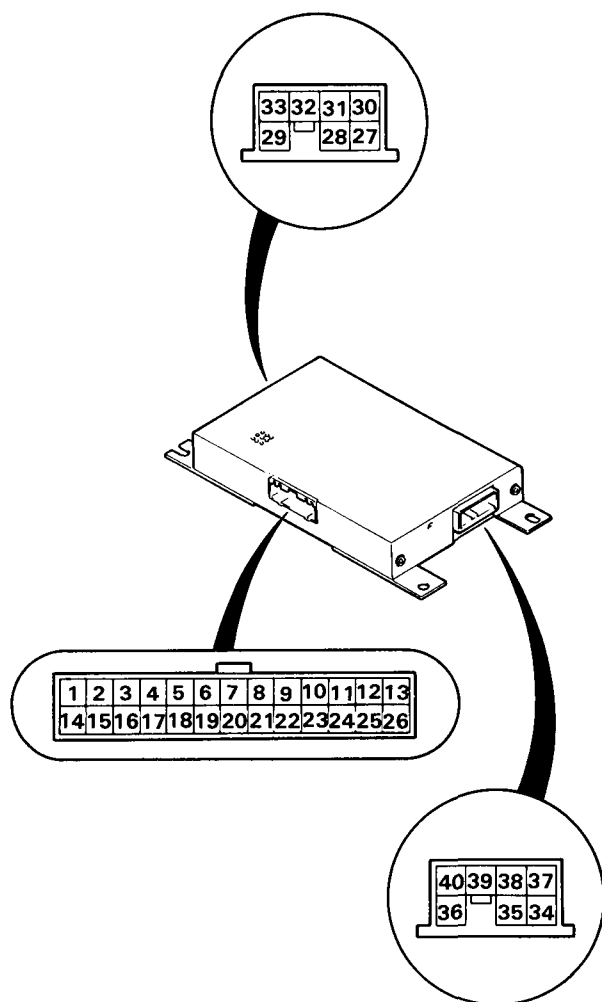

Terminal	Wire	Destination
1	BLU	Slide switch (Forward)
2	YEL	Recline switch (Forward)
3	GRN	Front lift switch (Up)
4	GRN/YEL	Sliding memory sensor
5	GRN/RED	Front lift memory sensor
6	BLK	Memory sensor ground
7	BLU/WHT	Position switch 1
8	—	—
9	GRN/BLU	Driver's Door switch
10	YEL/RED	Speed sensor
11	GRN	Reclining memory limit switch
12	RED	Rear lift switch (Up)
13	BLK	Seat switch common
14	BLU/YEL	Slide switch (Backward)
15	YEL/GRN	Recline switch (Backward)
16	GRN/YEL	Front lift switch (Down)
17	GRN/WHT	Reclining memory sensor
18	GRN/BLU	Rear lift memory sensor
19	YEL/WHT	Memory switch
20	BLU/YEL	Position switch 2
21	—	—
22	BLK	Memory switch common
23	BLK/RED	IG 1 No. 20 (7.5A) Fuse
24	—	—
25	RED/YEL	Rear lift switch (Down)
26	—	—
27	RED	Rear lift motor (⊕ Up)
28	GRN	Front lift motor (⊕ UP)
29	WHT/YEL	Back up No. 15 (7.5A) Fuse
30	RED/YEL	Rear lift motor (⊕ Down)
31	RED/WHT	+B <sub>2</sub> No. 55 (30A) Fuse
32	GRN/YEL	Front lift motor (⊕ Down)
33	BLK	Ground
34	—	—
35	BLU/YEL	Sliding motor (⊕ Backward)
36	YEL/GRN	Reclining motor (⊕ Backward)
37	BLK	Ground
38	WHT/RED	+B <sub>1</sub> No. 58 (30A) Fuse
39	BLU	Sliding motor (⊕ Forward)
40	YEL	Reclining motor (⊕ Forward)