

Seat Heaters (CANADA)

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		blown No. 10 (15A) fuse (in the dash fuse box)	Blown No. 19 (7.5A) fuse (in the dash fuse box)	Blown indicator light bulb	Seat heater switch	Seat heater	Thermistor (in the seat cushion heater)	Seat heater relay input	Seat heater control unit	Poor ground	Open circuit in wires or loose or disconnected terminals
Symptom											
Seat heaters operate, but indicator light does not go on.				1						G304	
Seat heaters do not operate and indicator light does not go on.		1			3			2		G302 G304	WHT/BLK or BLK/YEL
Seat heaters do not operate, but indicator light goes on.	Driver's seat								1	G304	GRN, BRN or ORN
	Front passenger's seat								1	G304	BLK/YEL, BRN or ORN/BLU
Seat cushion heater or seat back heater does not operate, but indicator light goes on.						1					
Seat heater cannot be adjusted.	Driver's seat				1		2		3		RED/YEL, RED/GRN, BLU or PNK
	Front passenger's seat				1		2		3		BLU/YEL, BLU/GRN, BLU or PNK