


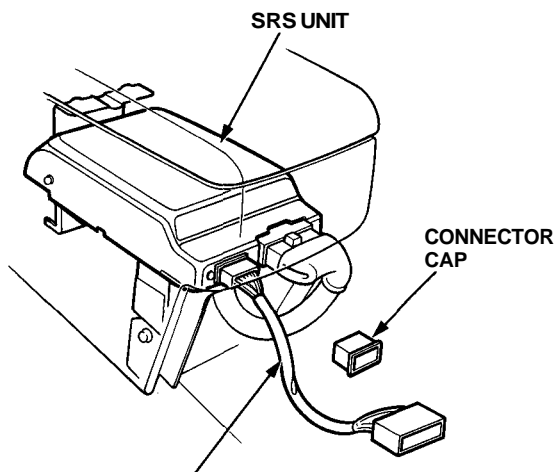

## Test Harnesses and Attachment Points


SRS test harness A



SRS TEST HARNESS A  
07MAZ-SL00500

|   |    |    |    |    |    |    |    |
|---|----|----|----|----|----|----|----|
| 1 | 2  | 3  | 4  | 5  | 6  | 7  | 8  |
| 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |

SRS test harness C  
Driver's Airbag:

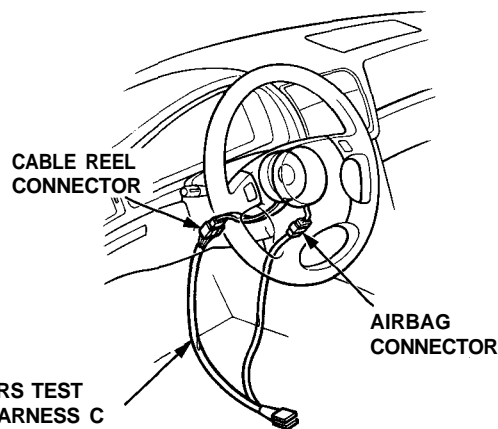


SRS TEST HARNESS C  
07MAZ-SP00600

|   |   |   |   |    |
|---|---|---|---|----|
| 1 | 2 | 3 | 4 | 5  |
| 6 | 7 | 8 | 9 | 10 |


Front Passenger's Airbag:

FRONT PASSENGER'S AIRBAG CONNECTOR

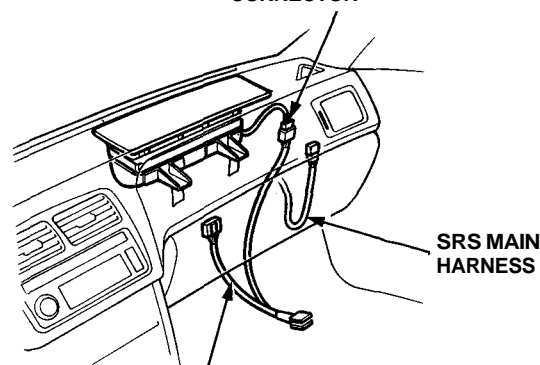

SRS TEST HARNESS C  
07MAZ-SP00600

SRS test harness B

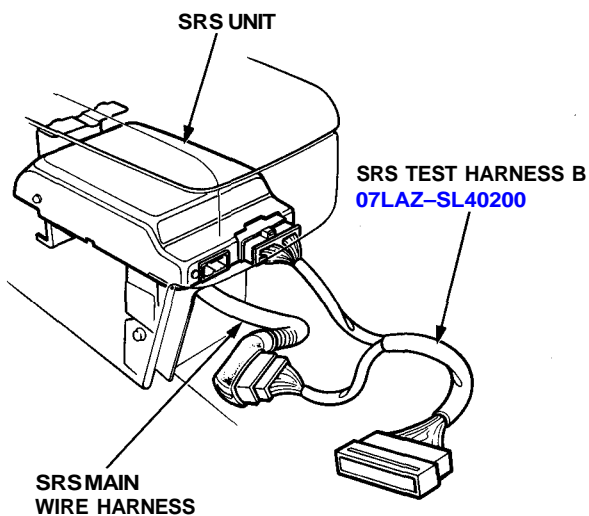

SRS TEST HARNESS B  
07LAZ-SL40200


SRS MAIN WIRE HARNESS

A-SIDE (SRS UNIT SIDE)

|   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |
|---|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|
| A | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |
| B | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |

B-SIDE (WIRE HARNESS SIDE)

SRS test harness D

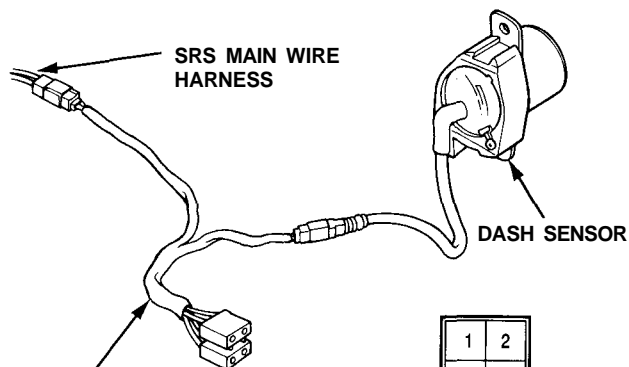

SRS TEST HARNESS D  
07LAZ-SL40400

|   |   |
|---|---|
| 1 | 2 |
| 3 | 4 |