

Supplement Restraint System (SRS)


Airbag Assembly Installation

CAUTION:

- Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.
- Be sure the battery cables are disconnected.


Driver's Airbag:

1. Place the driver's airbag assembly in the steering wheel, and secure it with new TORX® bolts.

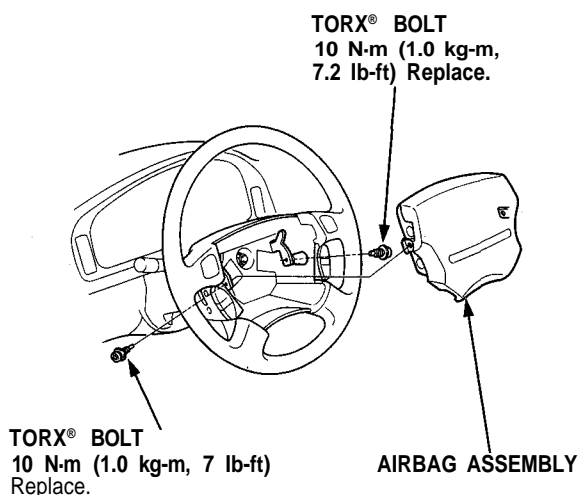


Front Passenger's Airbag:

2. Install the front passenger's airbag assembly in the reverse order of removal.

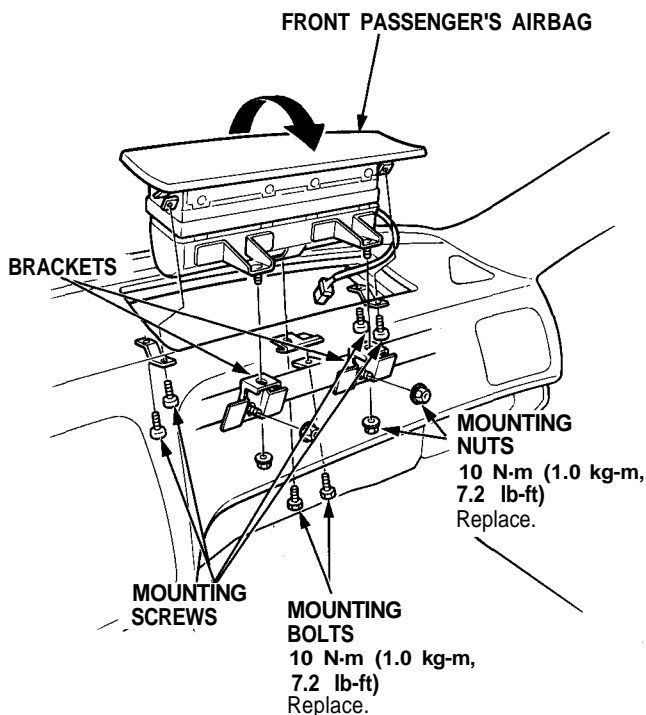

3. Disconnect the short connector from the front passenger's airbag connector, then connect the airbag 3-P connector and SRS main harness 3-P connector.
4. Attach the short connector to the connector holder. Install the glove box.
5. Disconnect the short connector from the driver's airbag connector, then connect the airbag 3-P connector and cable reel 3-P connector.
6. Attach the short connector to lid A, then reinstall the lid on the steering wheel.

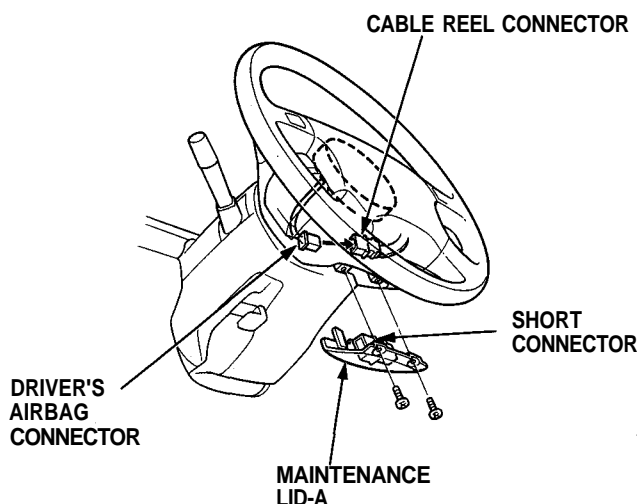

7. Connect the battery positive cable, then connect the negative cable.
8. After installing the airbag assembly, confirm proper system operation:
 - Turn the ignition to II: the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
 - Confirm operation of horn buttons.
 - Confirm operation of cruise control set/resume switch.
 - Enter the customer's code number to restore radio operation [L, LS model] (See page 23-228.)