




Dash Sensor Removal

CAUTION:


- Do not damage the sensor wiring.
- Do not install used SRS parts from another car. When repairing: use only new SRS parts.
- Carefully inspect the front sensors for signs of being dropped or improperly handled, such as dents, cracks or deformation.

NOTE: Before disconnecting the battery cable be sure you get the customer's anti-theft radio code number (L, LS model).


1. Disconnect the battery negative cable, then disconnect the positive cable.
2. Install the short connectors on both airbags (See page 23-344).

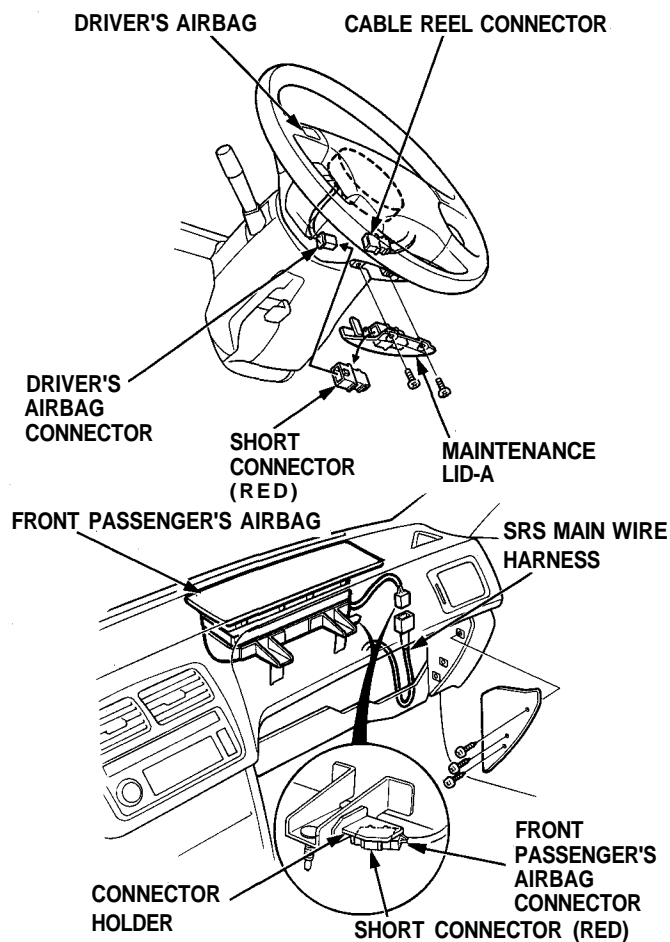

3. Left Dash Sensor:
Remove the footrest, left door sill molding and pull the carpet back, then remove the sensor cover.

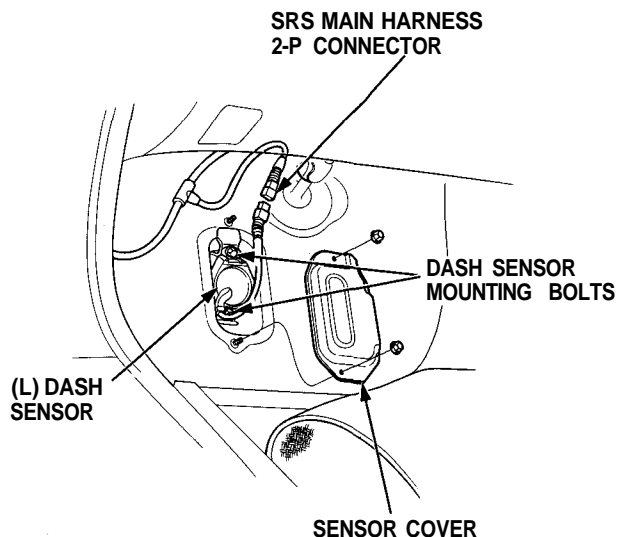

4. Right Dash Sensor:
Remove the right door sill molding and pull back the carpeting. Remove the ECU.

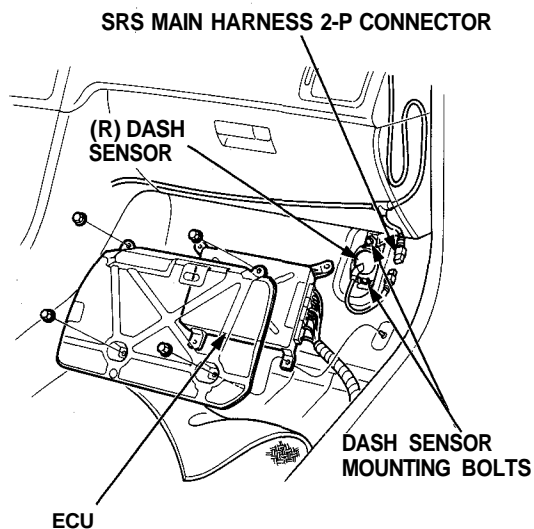

5. Remove the 2 mounting bolts, then remove the dash sensor.

