




## SRS Unit Removal

### CAUTION:


- Always keep the short connector on the airbag connector when the harness is disconnected.
- Do not damage the pins of connectors.
- No serviceable parts inside.
- Do not disassemble or tamper.
- Store in a clean, dry area.
- Do not use any SRS unit which has been subjected to water damage or shows signs of being dropped or improperly handled, such as dents, cracks or deformation.

NOTE: Before you disconnect the battery, be sure you get the customer's anti-theft radio code number (L, LS model).

1. Disconnect the battery negative cable, then disconnect the positive cable.
2. Install the short connectors on both airbags. (See page 23-344).

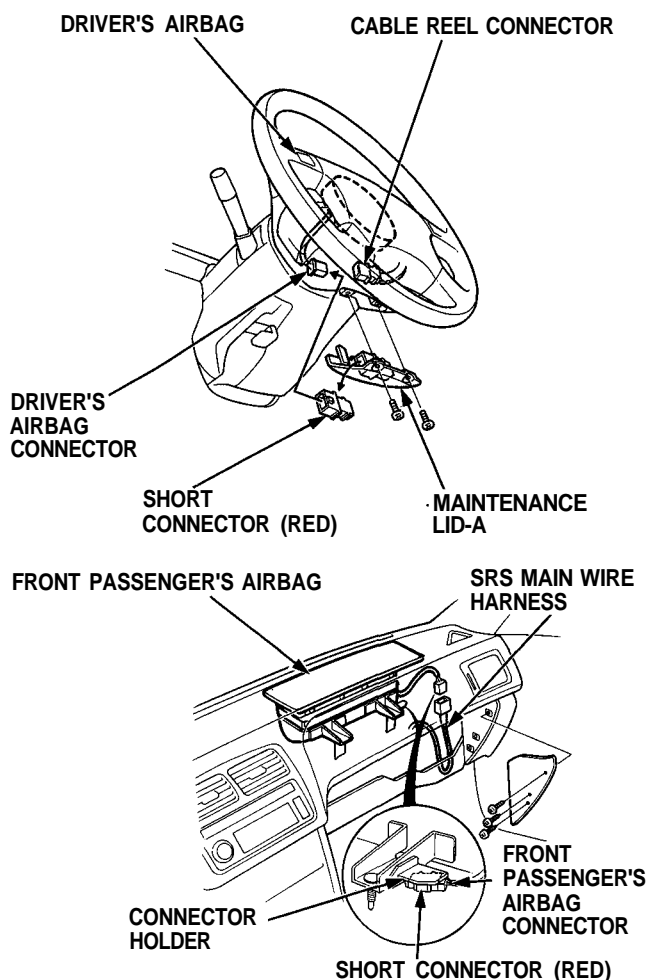

3. Remove the rear console, then disconnect the SRS main harness 18-P connector from the SRS unit.

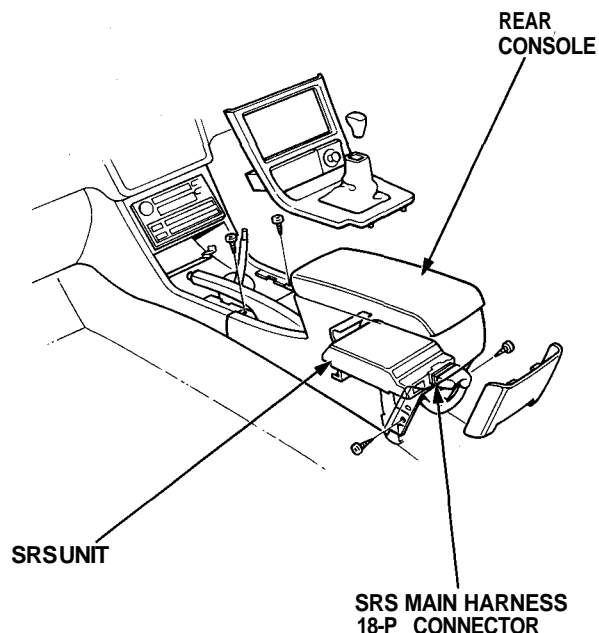

4. Remove the SRS unit 4 mounting bolts, then remove the SRS unit.

